

1958 RAMBLER AMERICAN I6

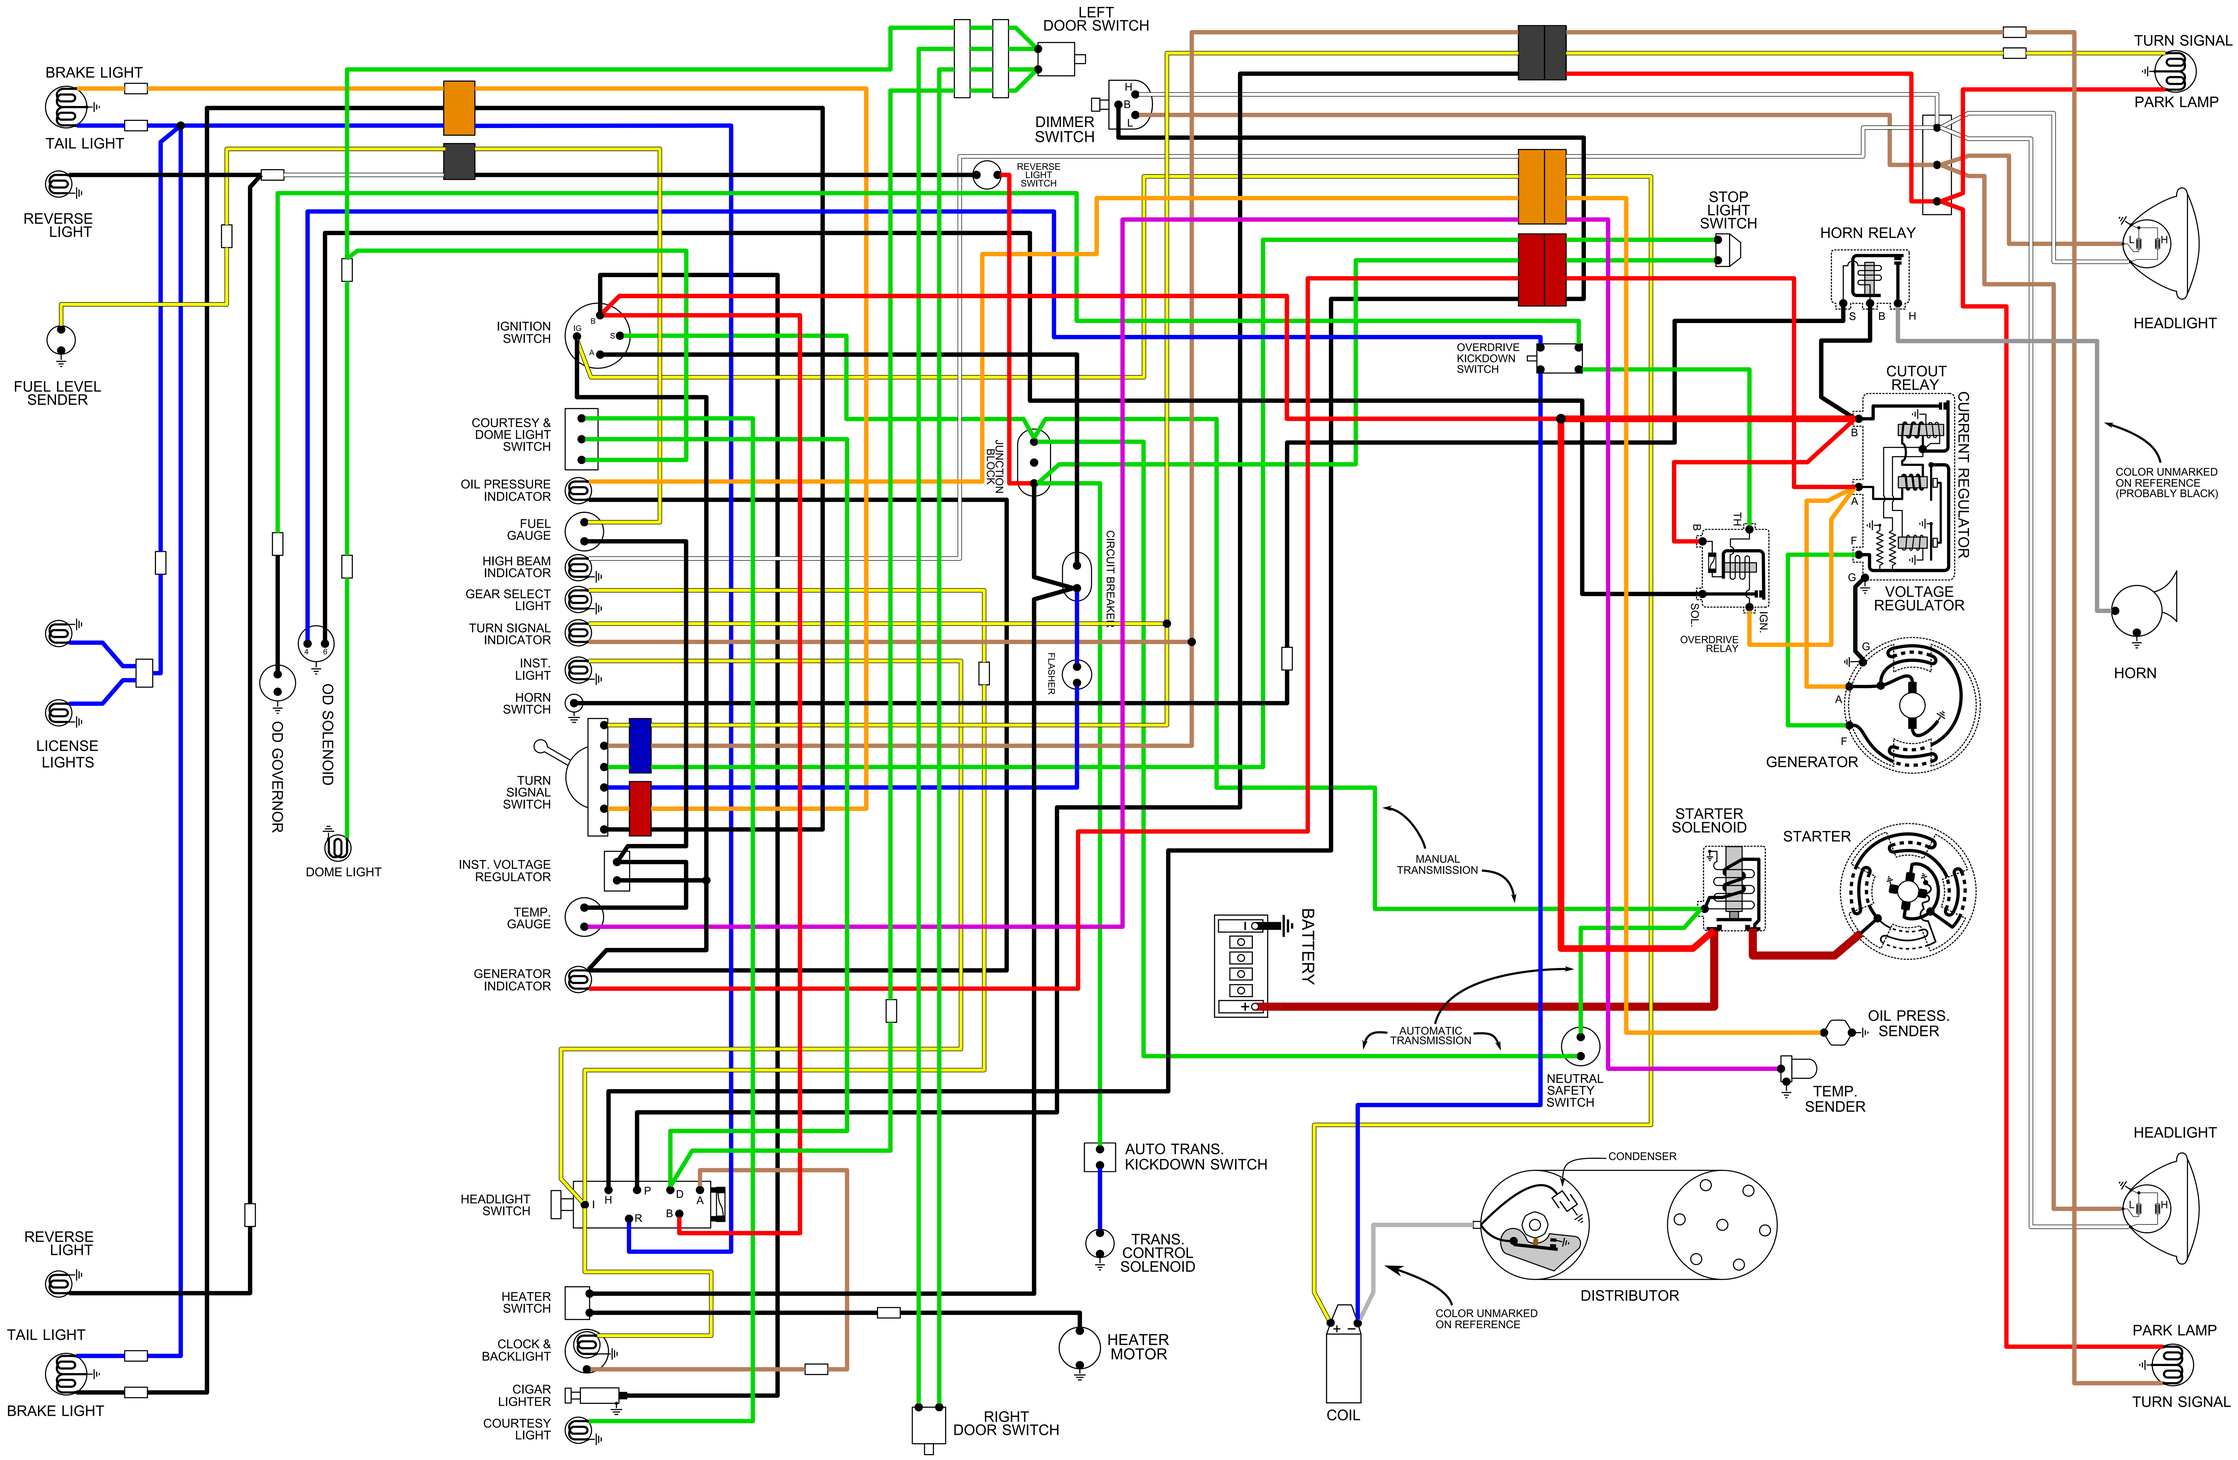

1958 RAMBLER AMERICAN I6


MAIN POWER

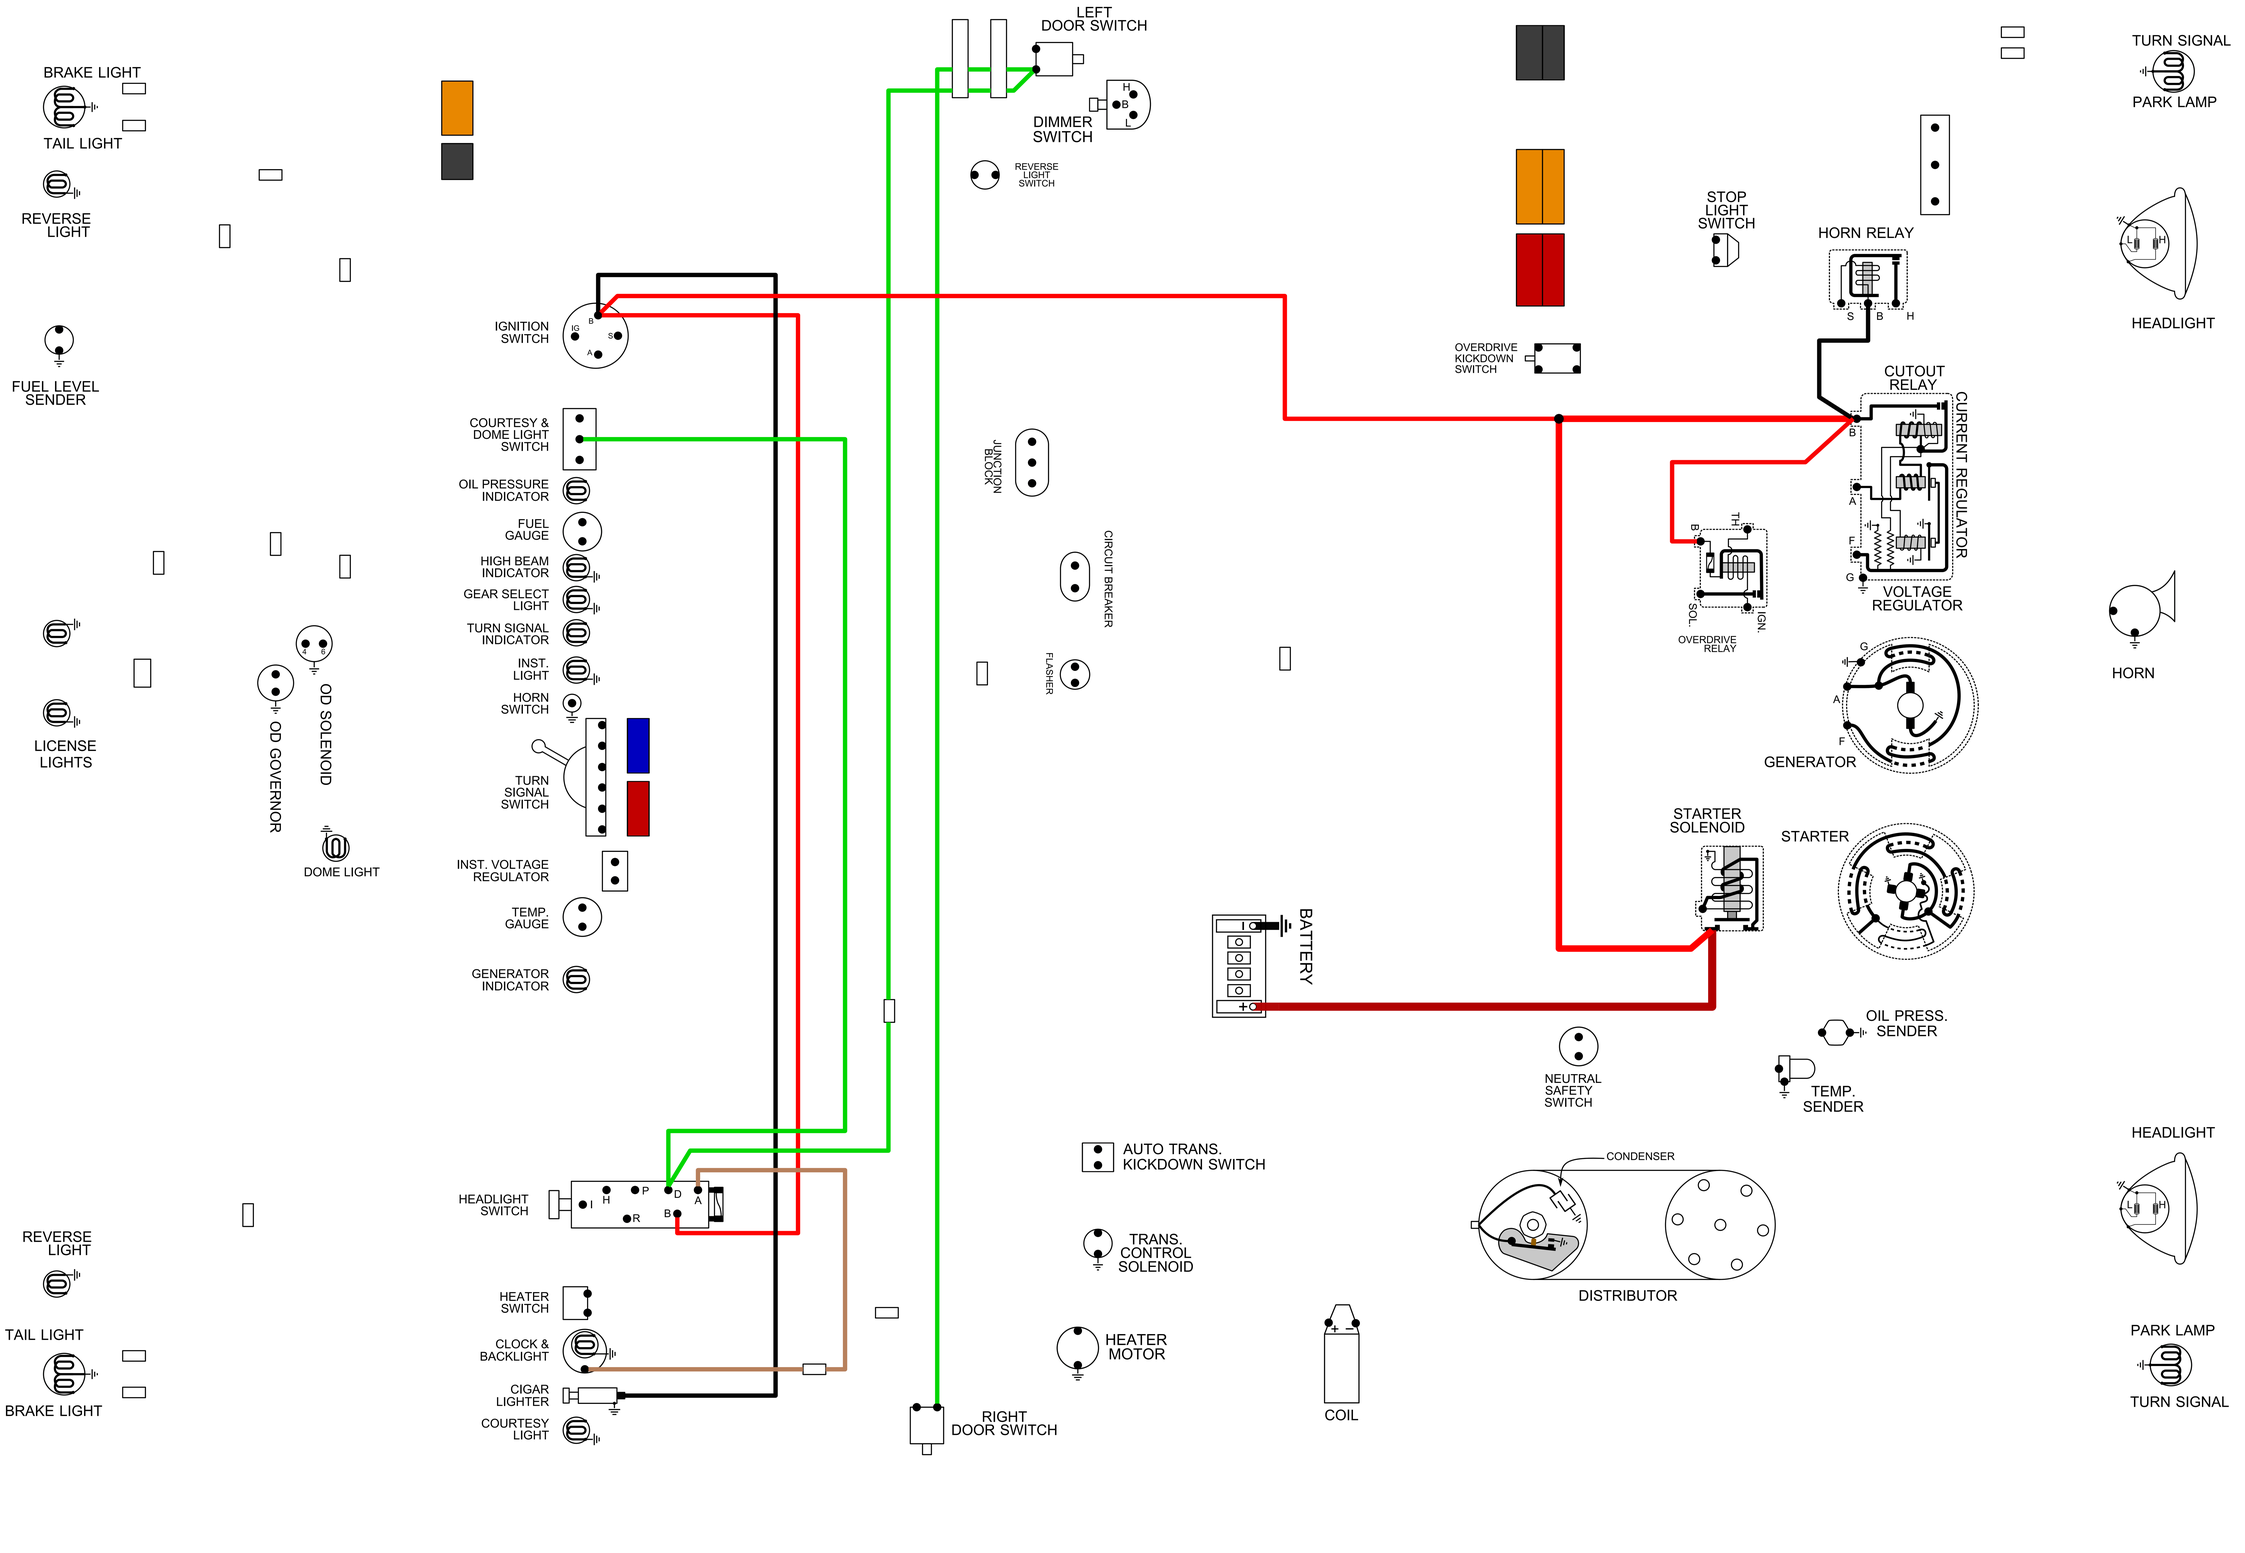


CINCO

1958 RAMBLER AMERICAN I6

ACCESSORY POWER

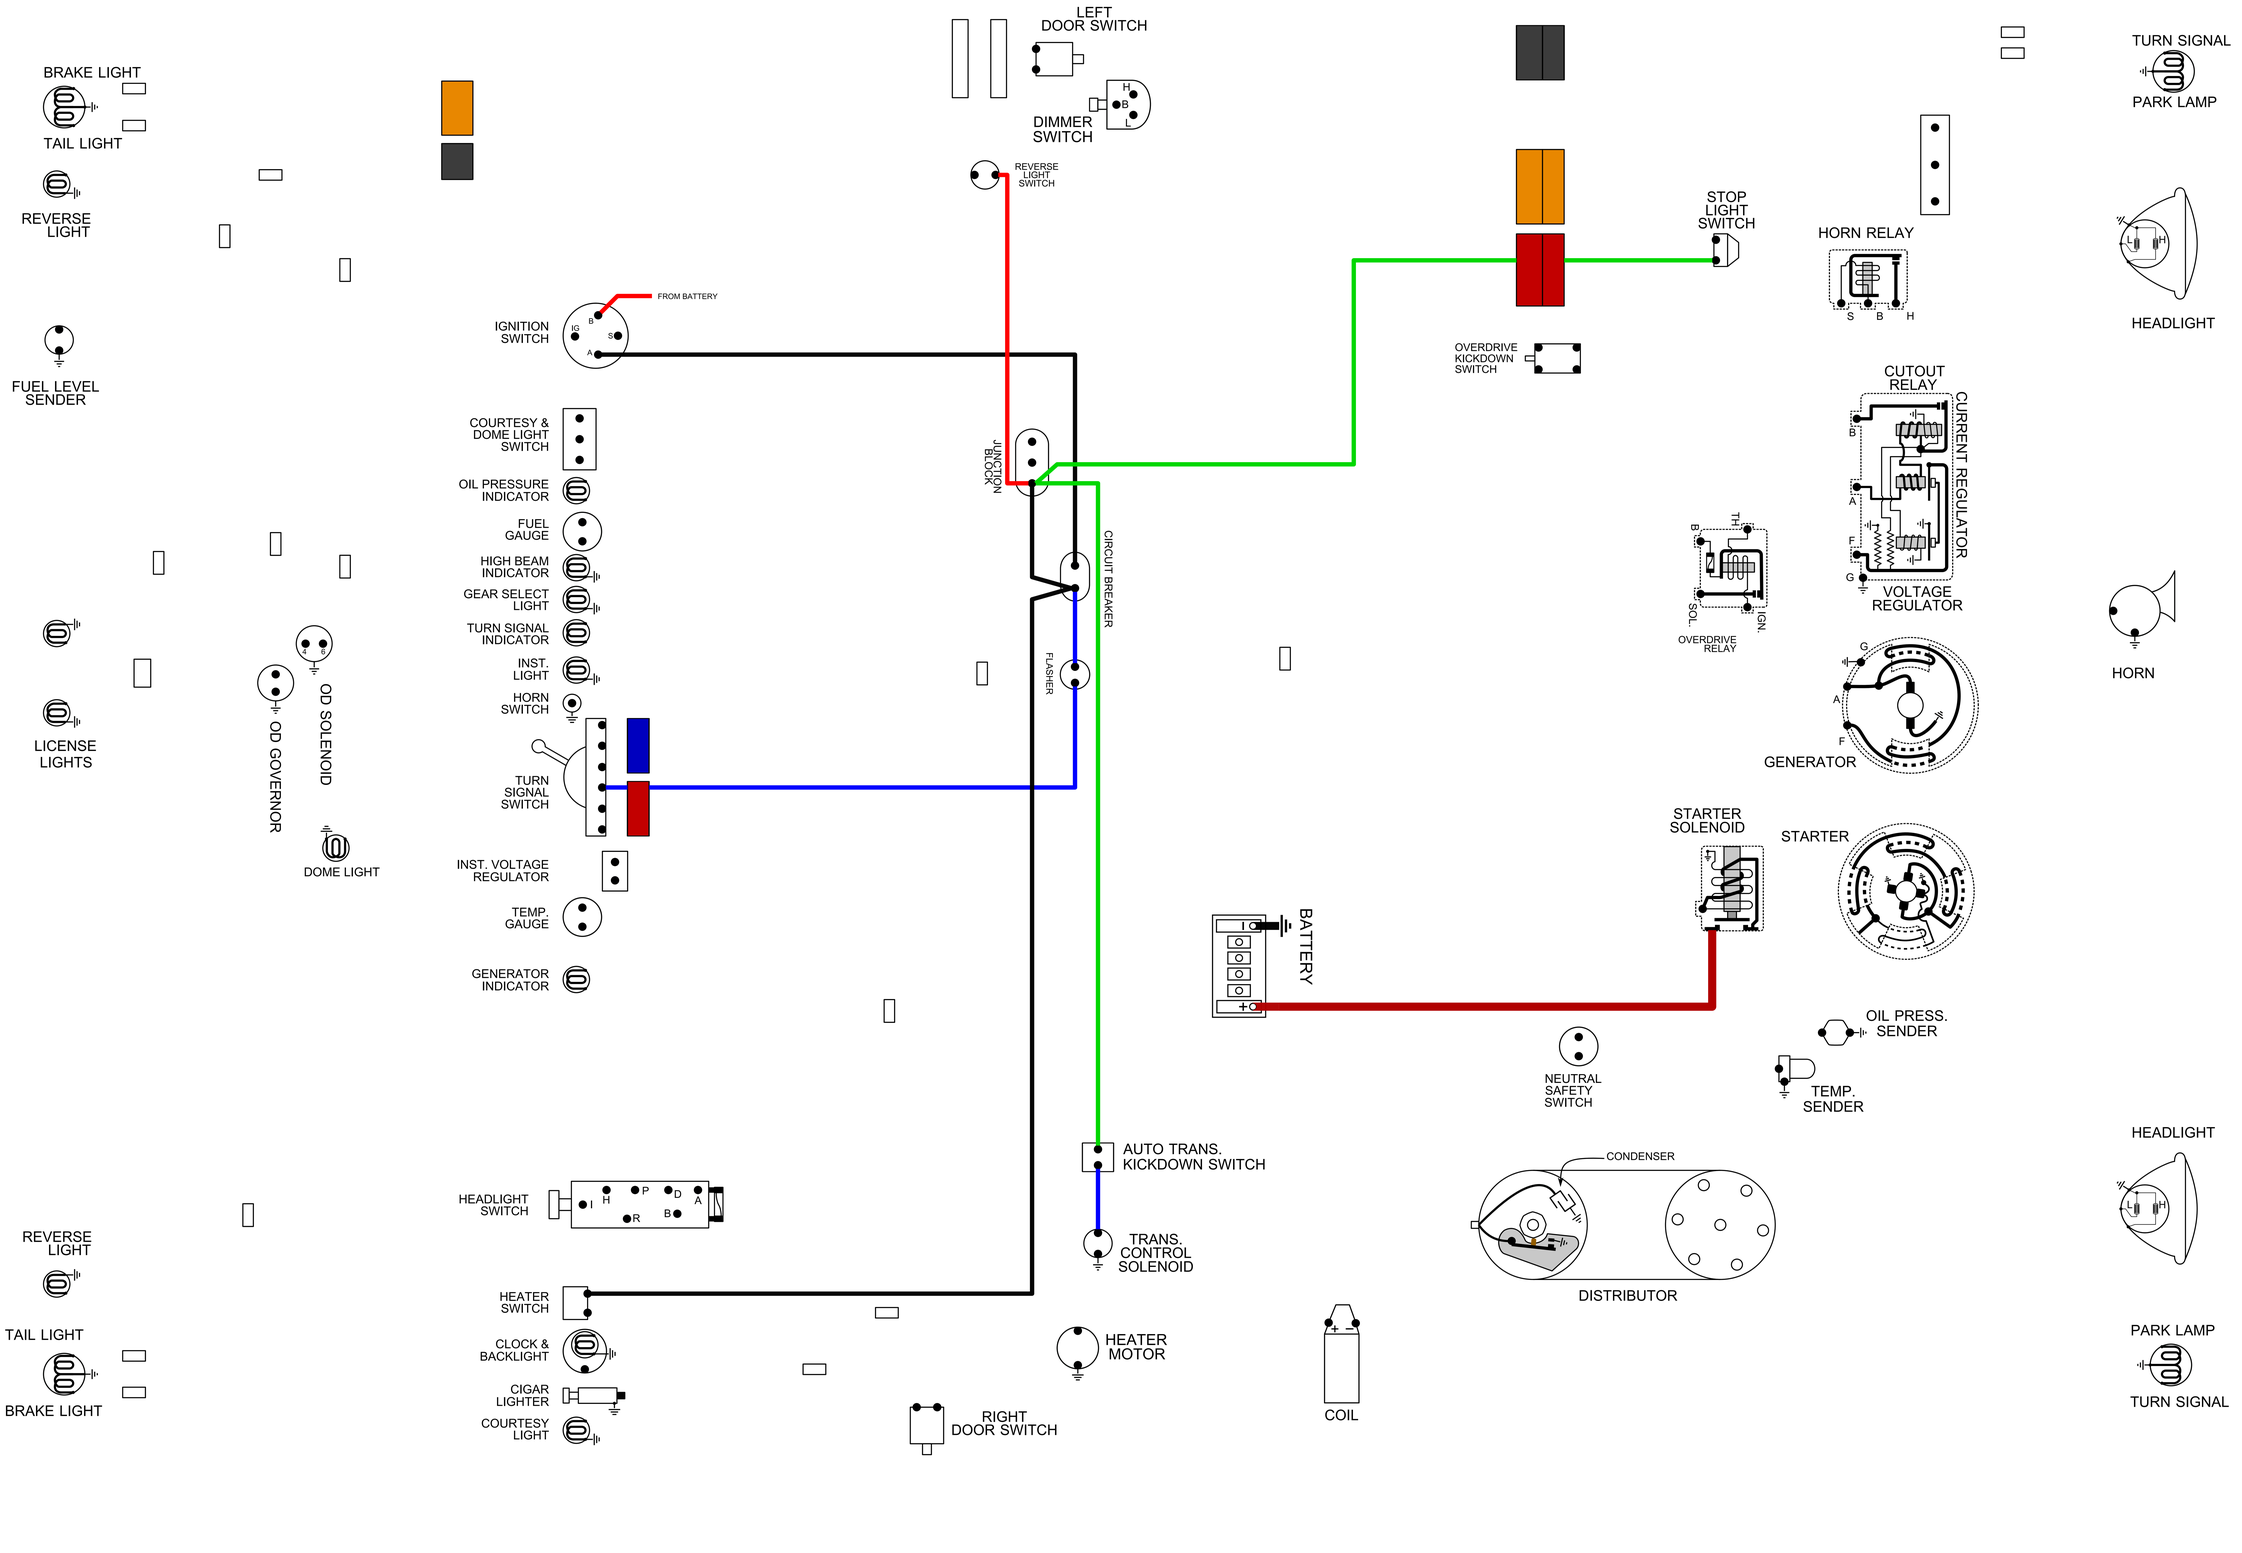

1958 RAMBLER AMERICAN I6
IGNITION SYSTEM

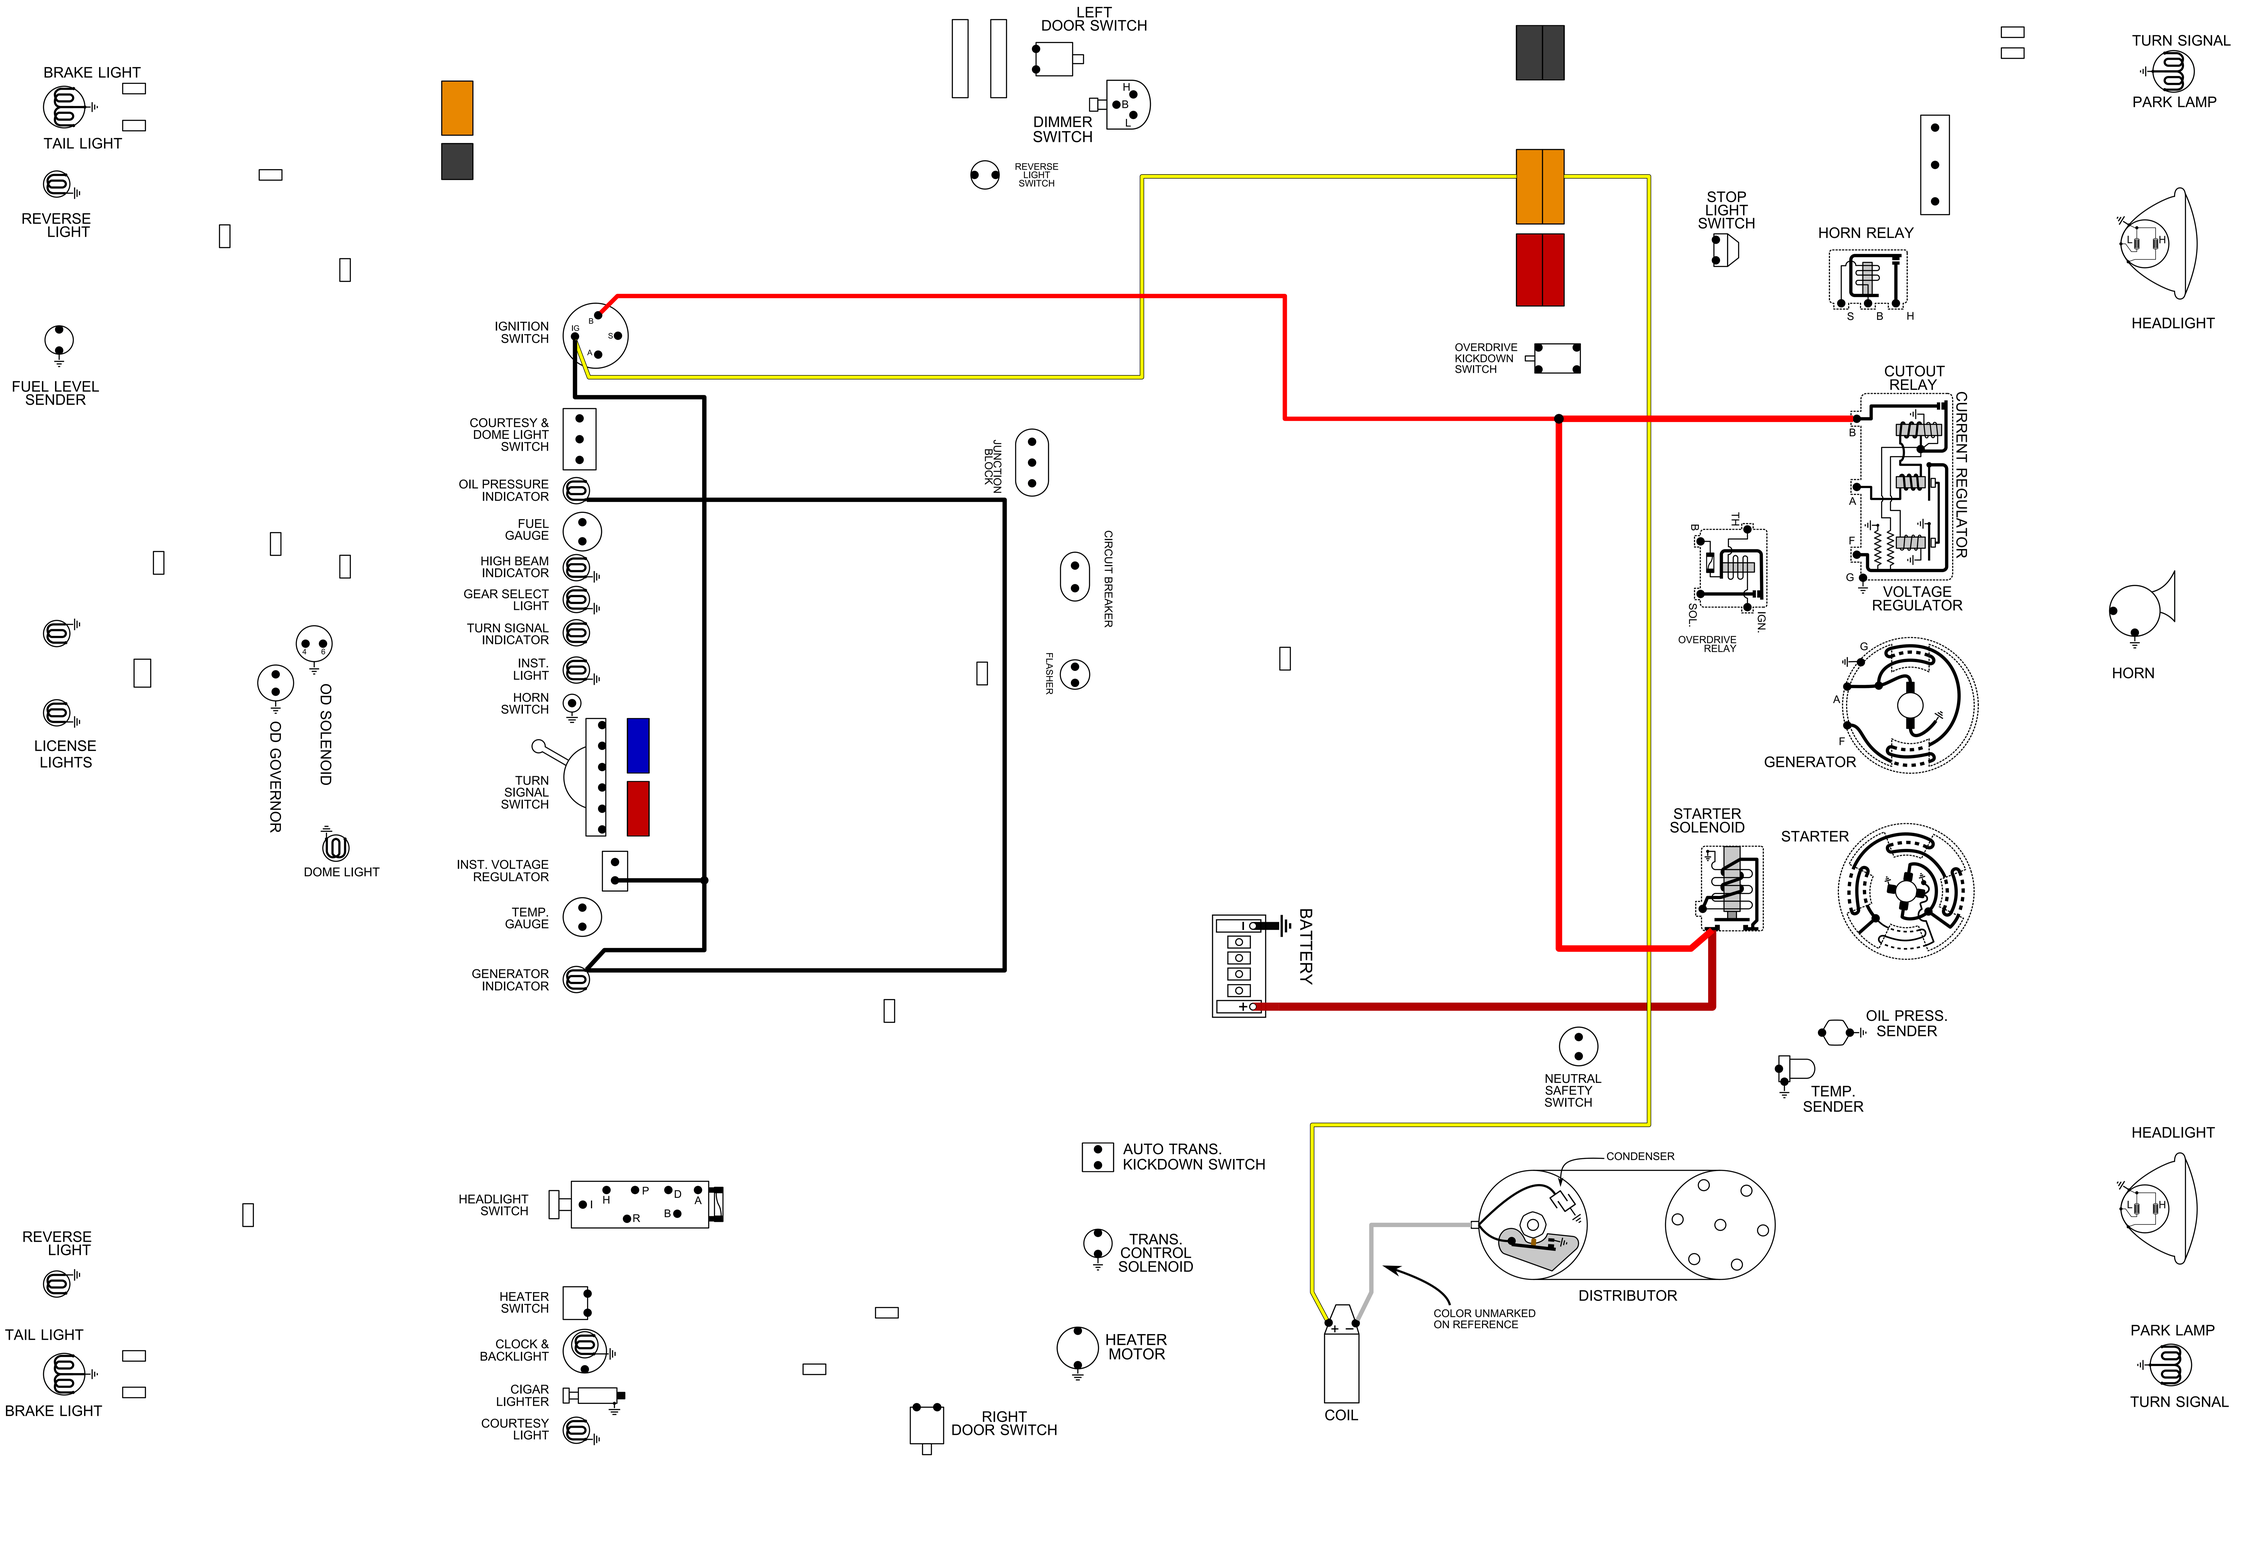


CINCO

1958 RAMBLER AMERICAN I6
STARTING SYSTEM


BRAKE LIGHT
TAIL LIGHT
REVERSE LIGHT
FUEL LEVEL SENDER
LICENSE LIGHTS
OD GOVERNOR
OD SOLENOID
DOME LIGHT
LEFT DOOR SWITCH
DIMMER SWITCH
REVERSE LIGHT SWITCH
IGNITION SWITCH
COURTESY & DOME LIGHT SWITCH
OIL PRESSURE INDICATOR
FUEL GAUGE
HIGH BEAM INDICATOR
GEAR SELECT LIGHT
TURN SIGNAL INDICATOR
INST. LIGHT
HORN SWITCH
TURN SIGNAL SWITCH
INST. VOLTAGE REGULATOR
TEMP. GAUGE
GENERATOR INDICATOR
JUNCTION BLOCK
CIRCUIT BREAKER
FLASHER
OVERDRIVE KICKDOWN SWITCH
STOP LIGHT SWITCH
HORN RELAY
TURN SIGNAL
PARK LAMP
HEADLIGHT
CUTOUT RELAY
CURRENT REGULATOR
VOLTAGE REGULATOR
OVERDRIVE RELAY
GENERATOR
HORN
STARTER SOLENOID
STARTER
MANUAL TRANSMISSION
BATTERY
AUTOMATIC TRANSMISSION
NEUTRAL SAFETY SWITCH
OIL PRESS. SENDER
TEMP. SENDER
HEADLIGHT SWITCH
AUTO TRANS. KICKDOWN SWITCH
TRANS. CONTROL SOLENOID
HEATER MOTOR
RIGHT DOOR SWITCH
COIL
CONDENSER
DISTRIBUTOR
HEADLIGHT
PARK LAMP
TURN SIGNAL
REVERSE LIGHT
TAIL LIGHT
BRAKE LIGHT
HEATER SWITCH
CLOCK & BACKLIGHT
CIGAR LIGHTER
COURTESY LIGHT

1958 RAMBLER AMERICAN I6
CHARGING SYSTEM

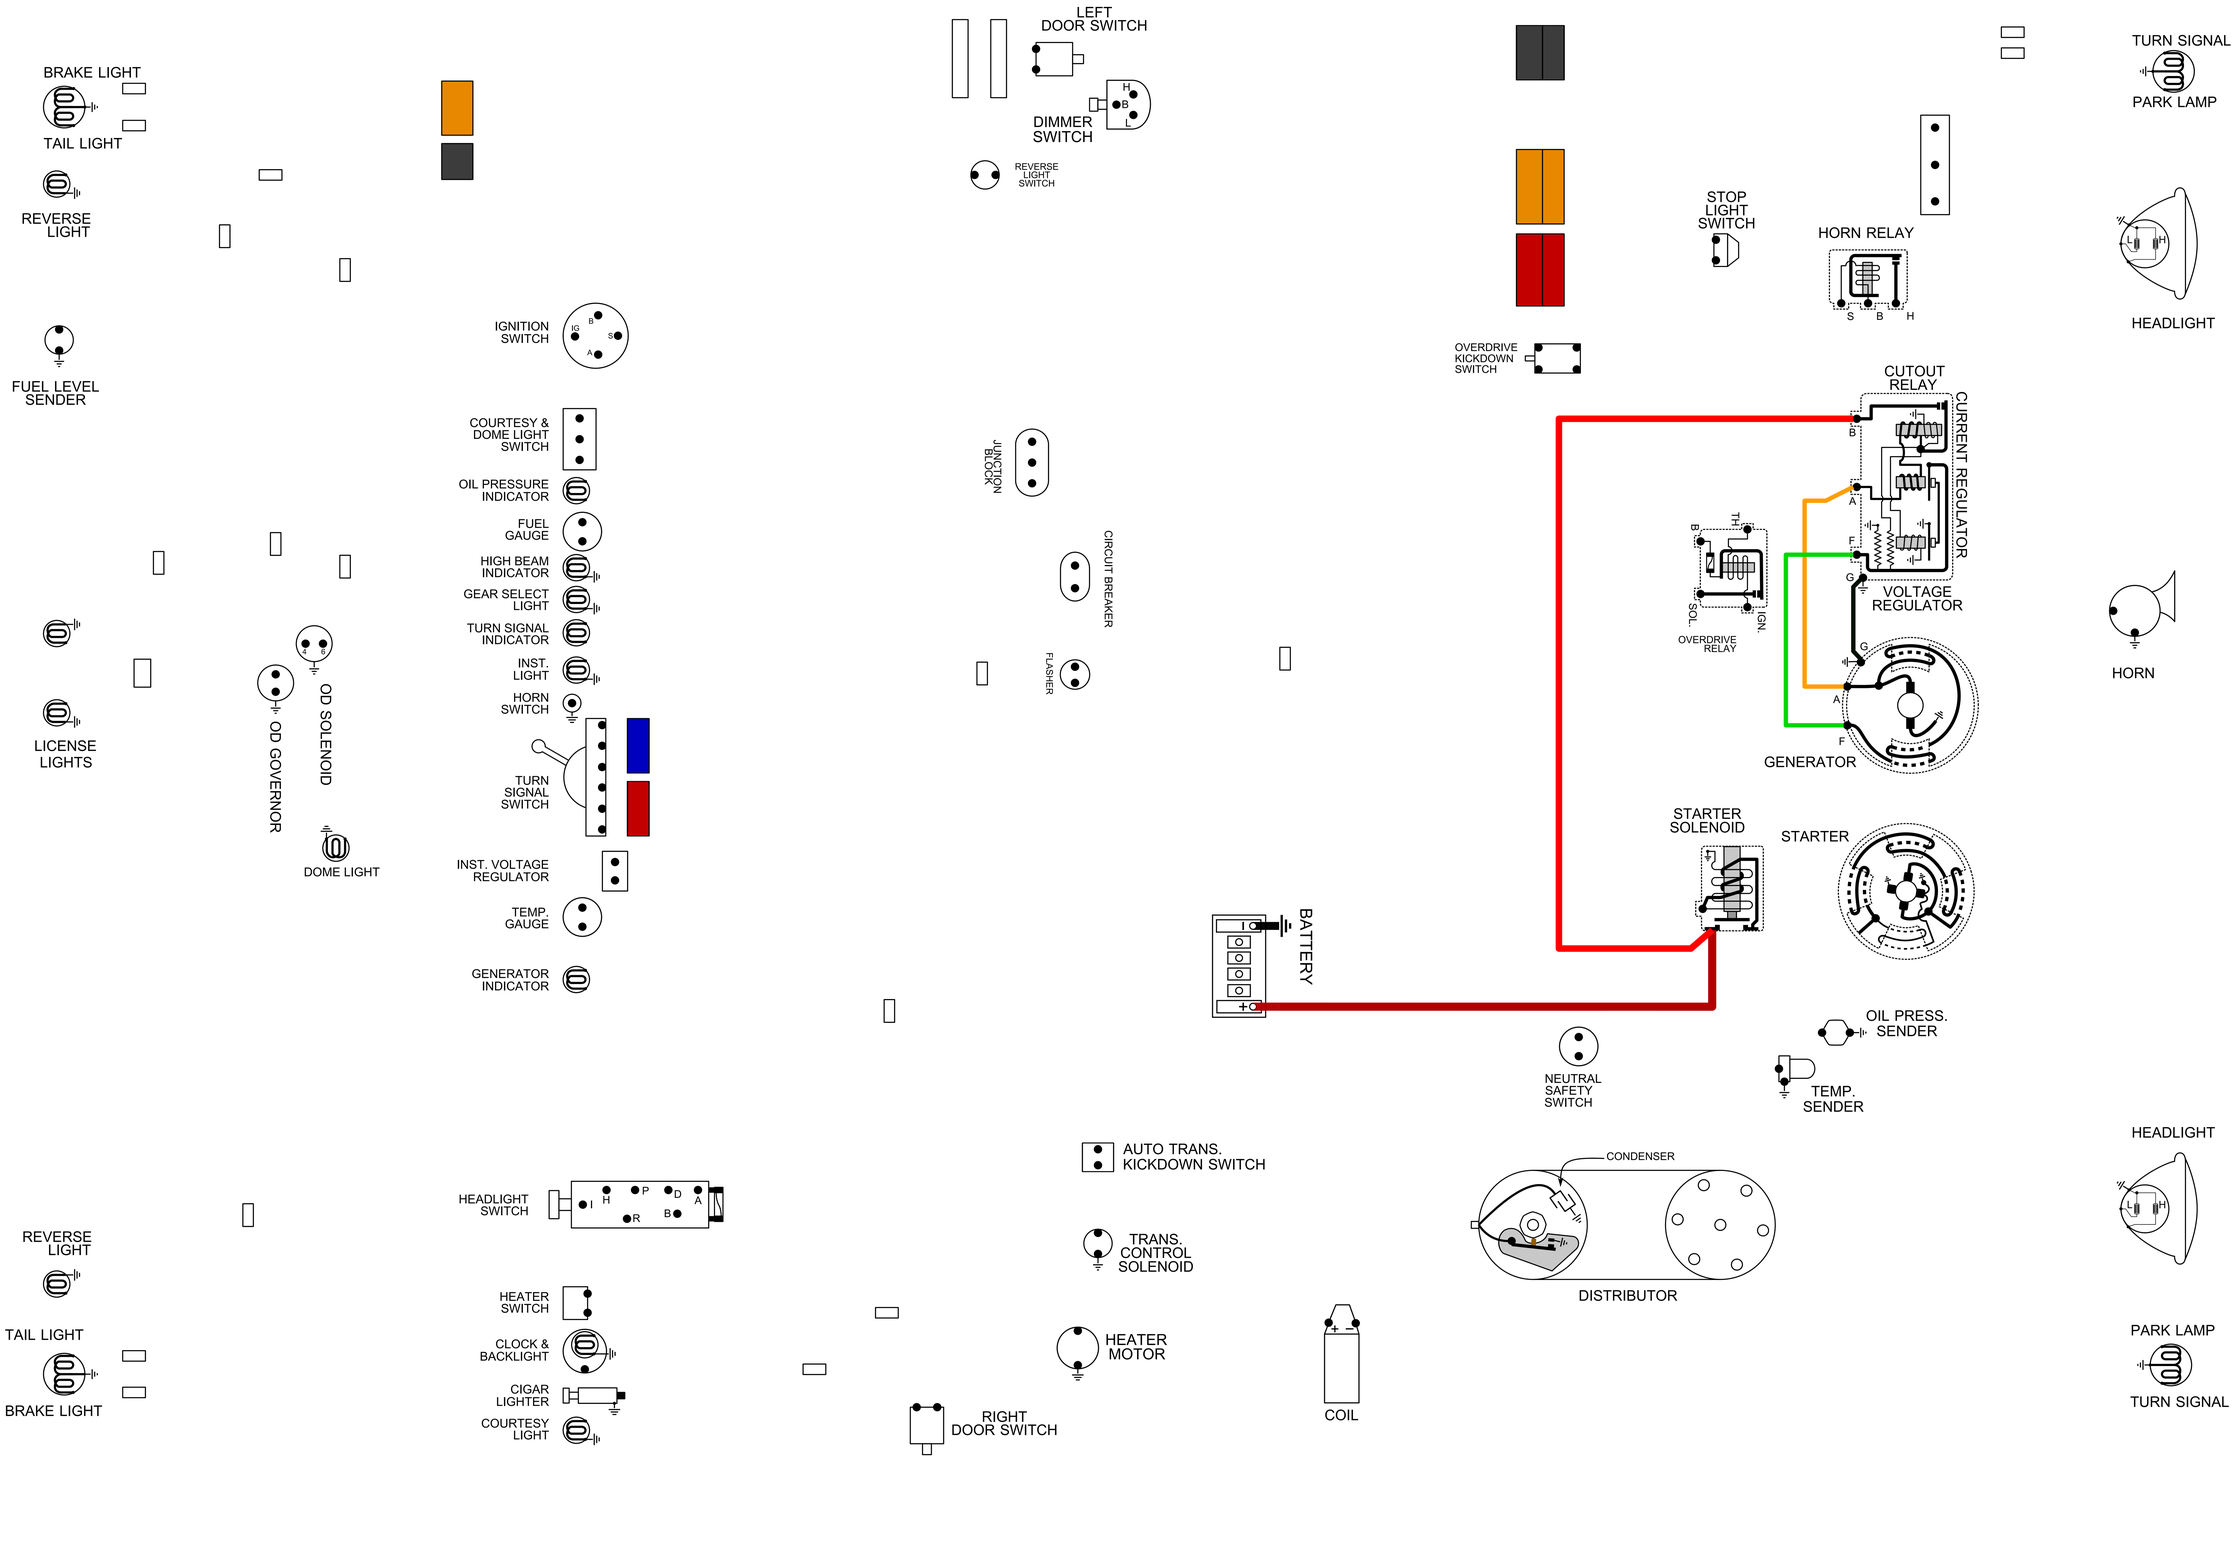


1958 RAMBLER AMERICAN I6

HEADLIGHTS

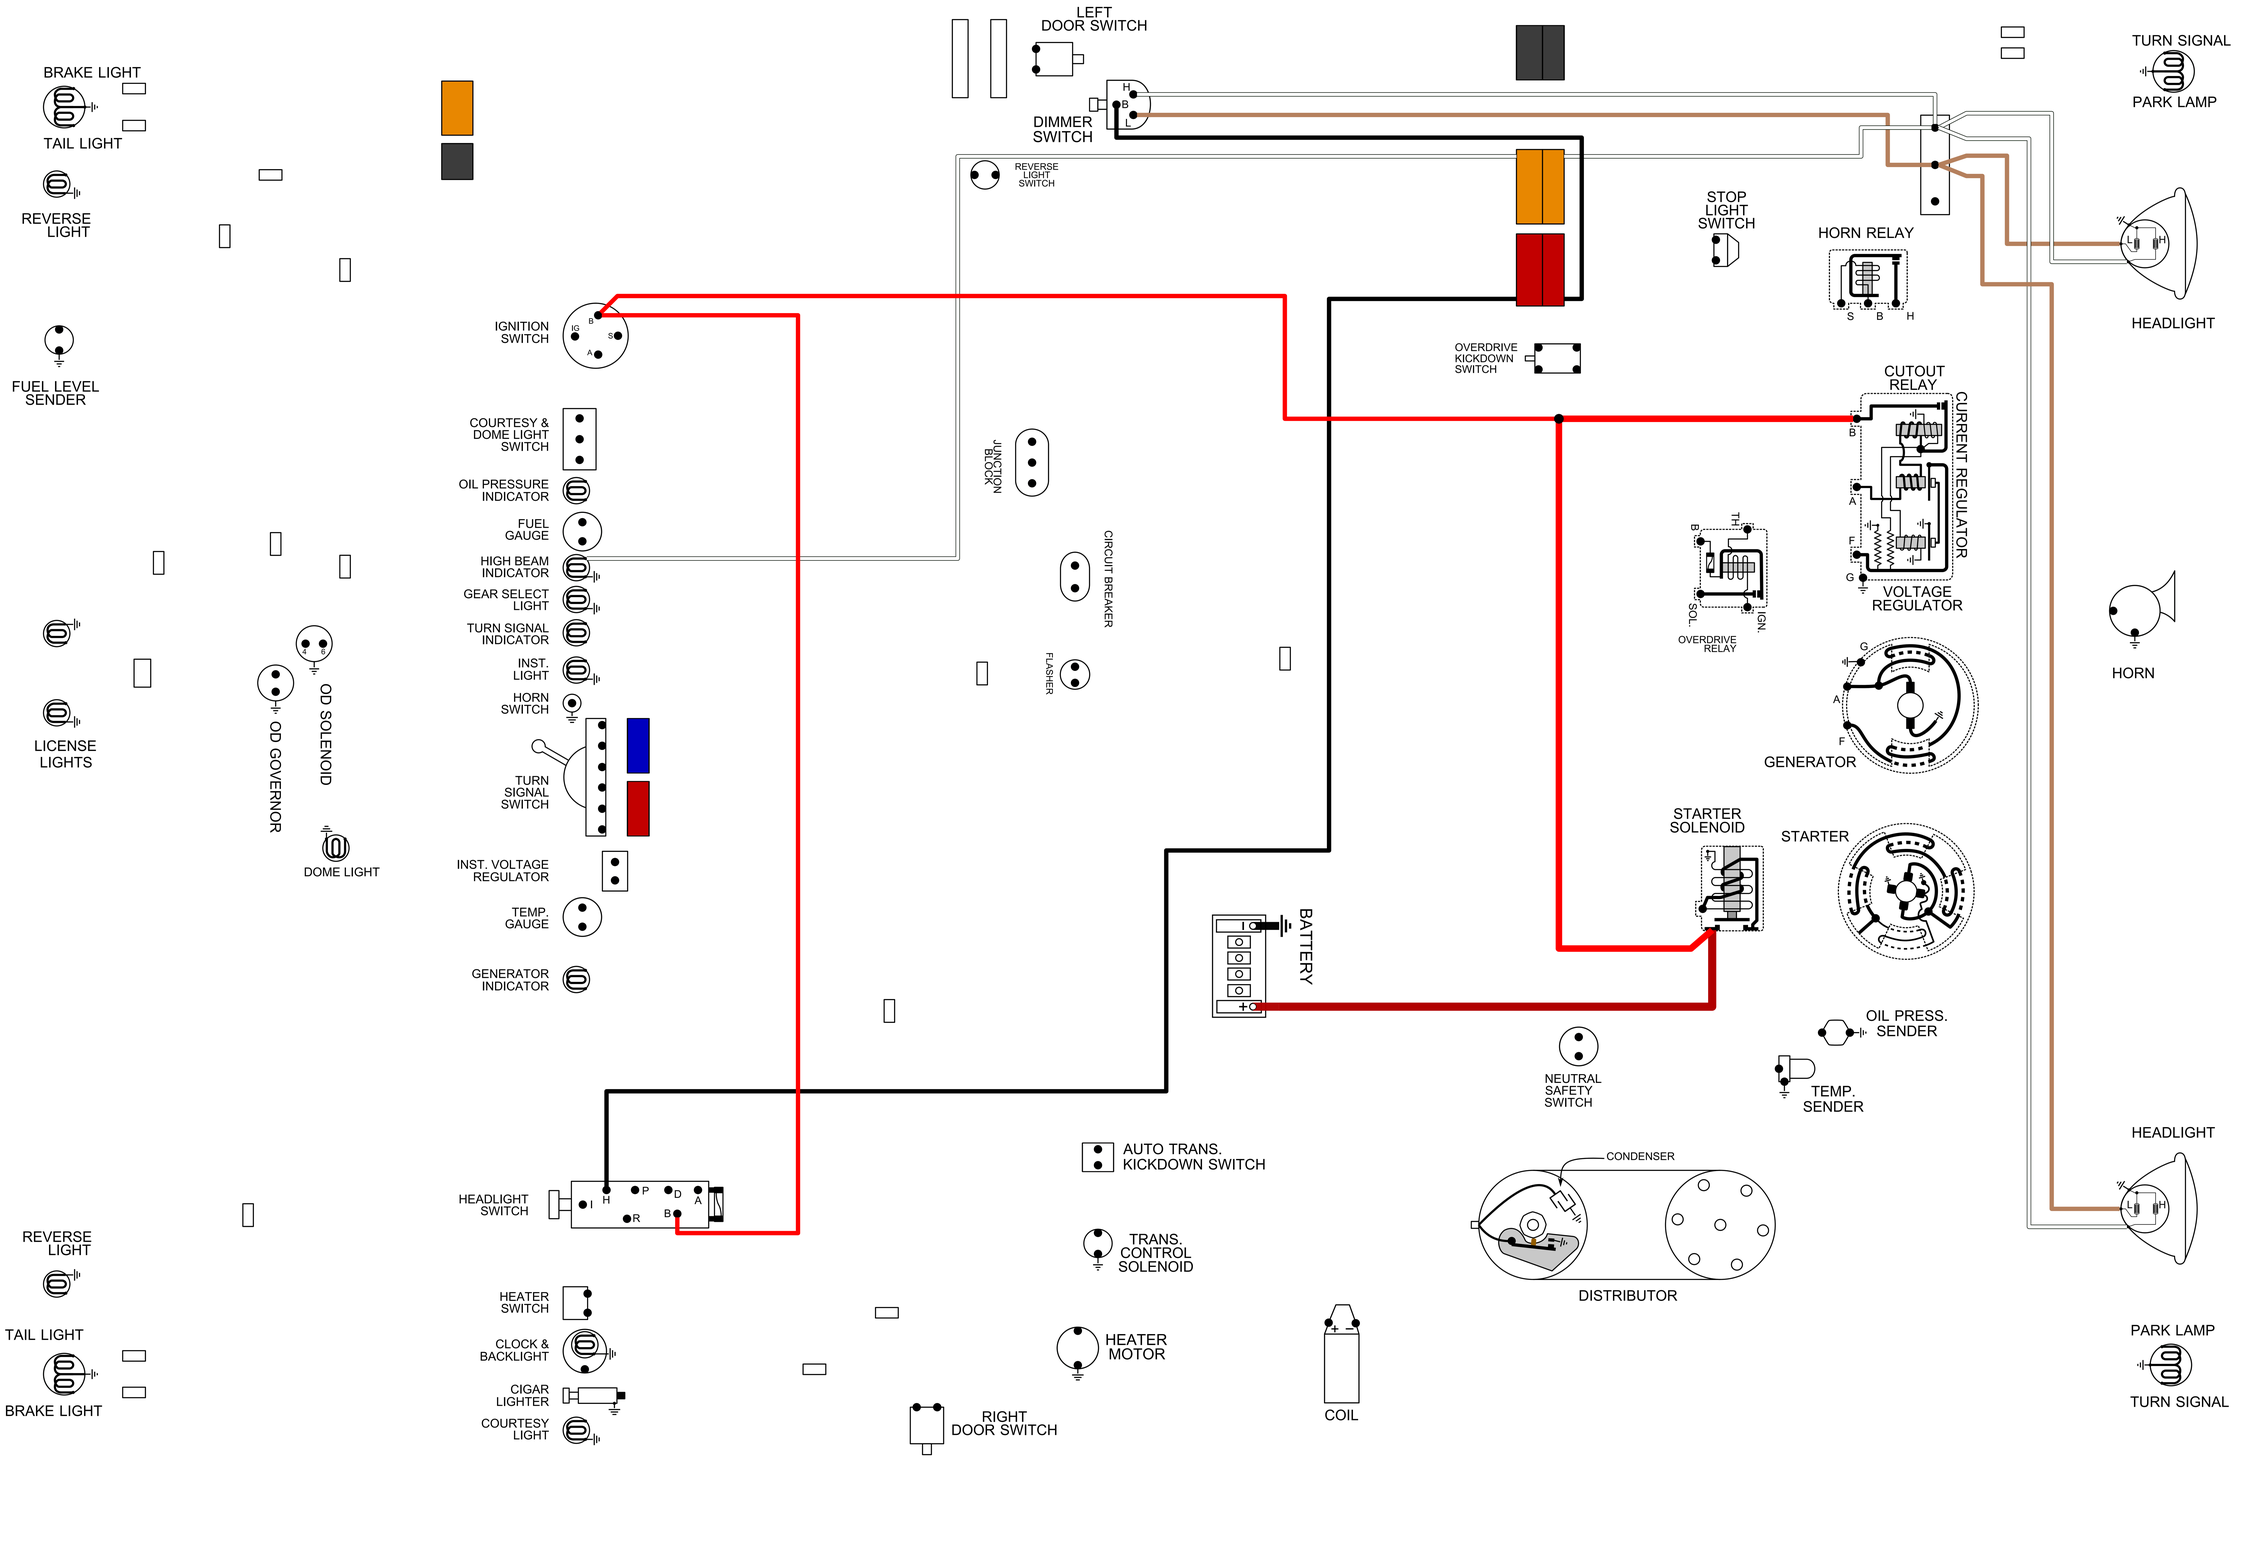


1958 RAMBLER AMERICAN I6

RUNNING LIGHTS

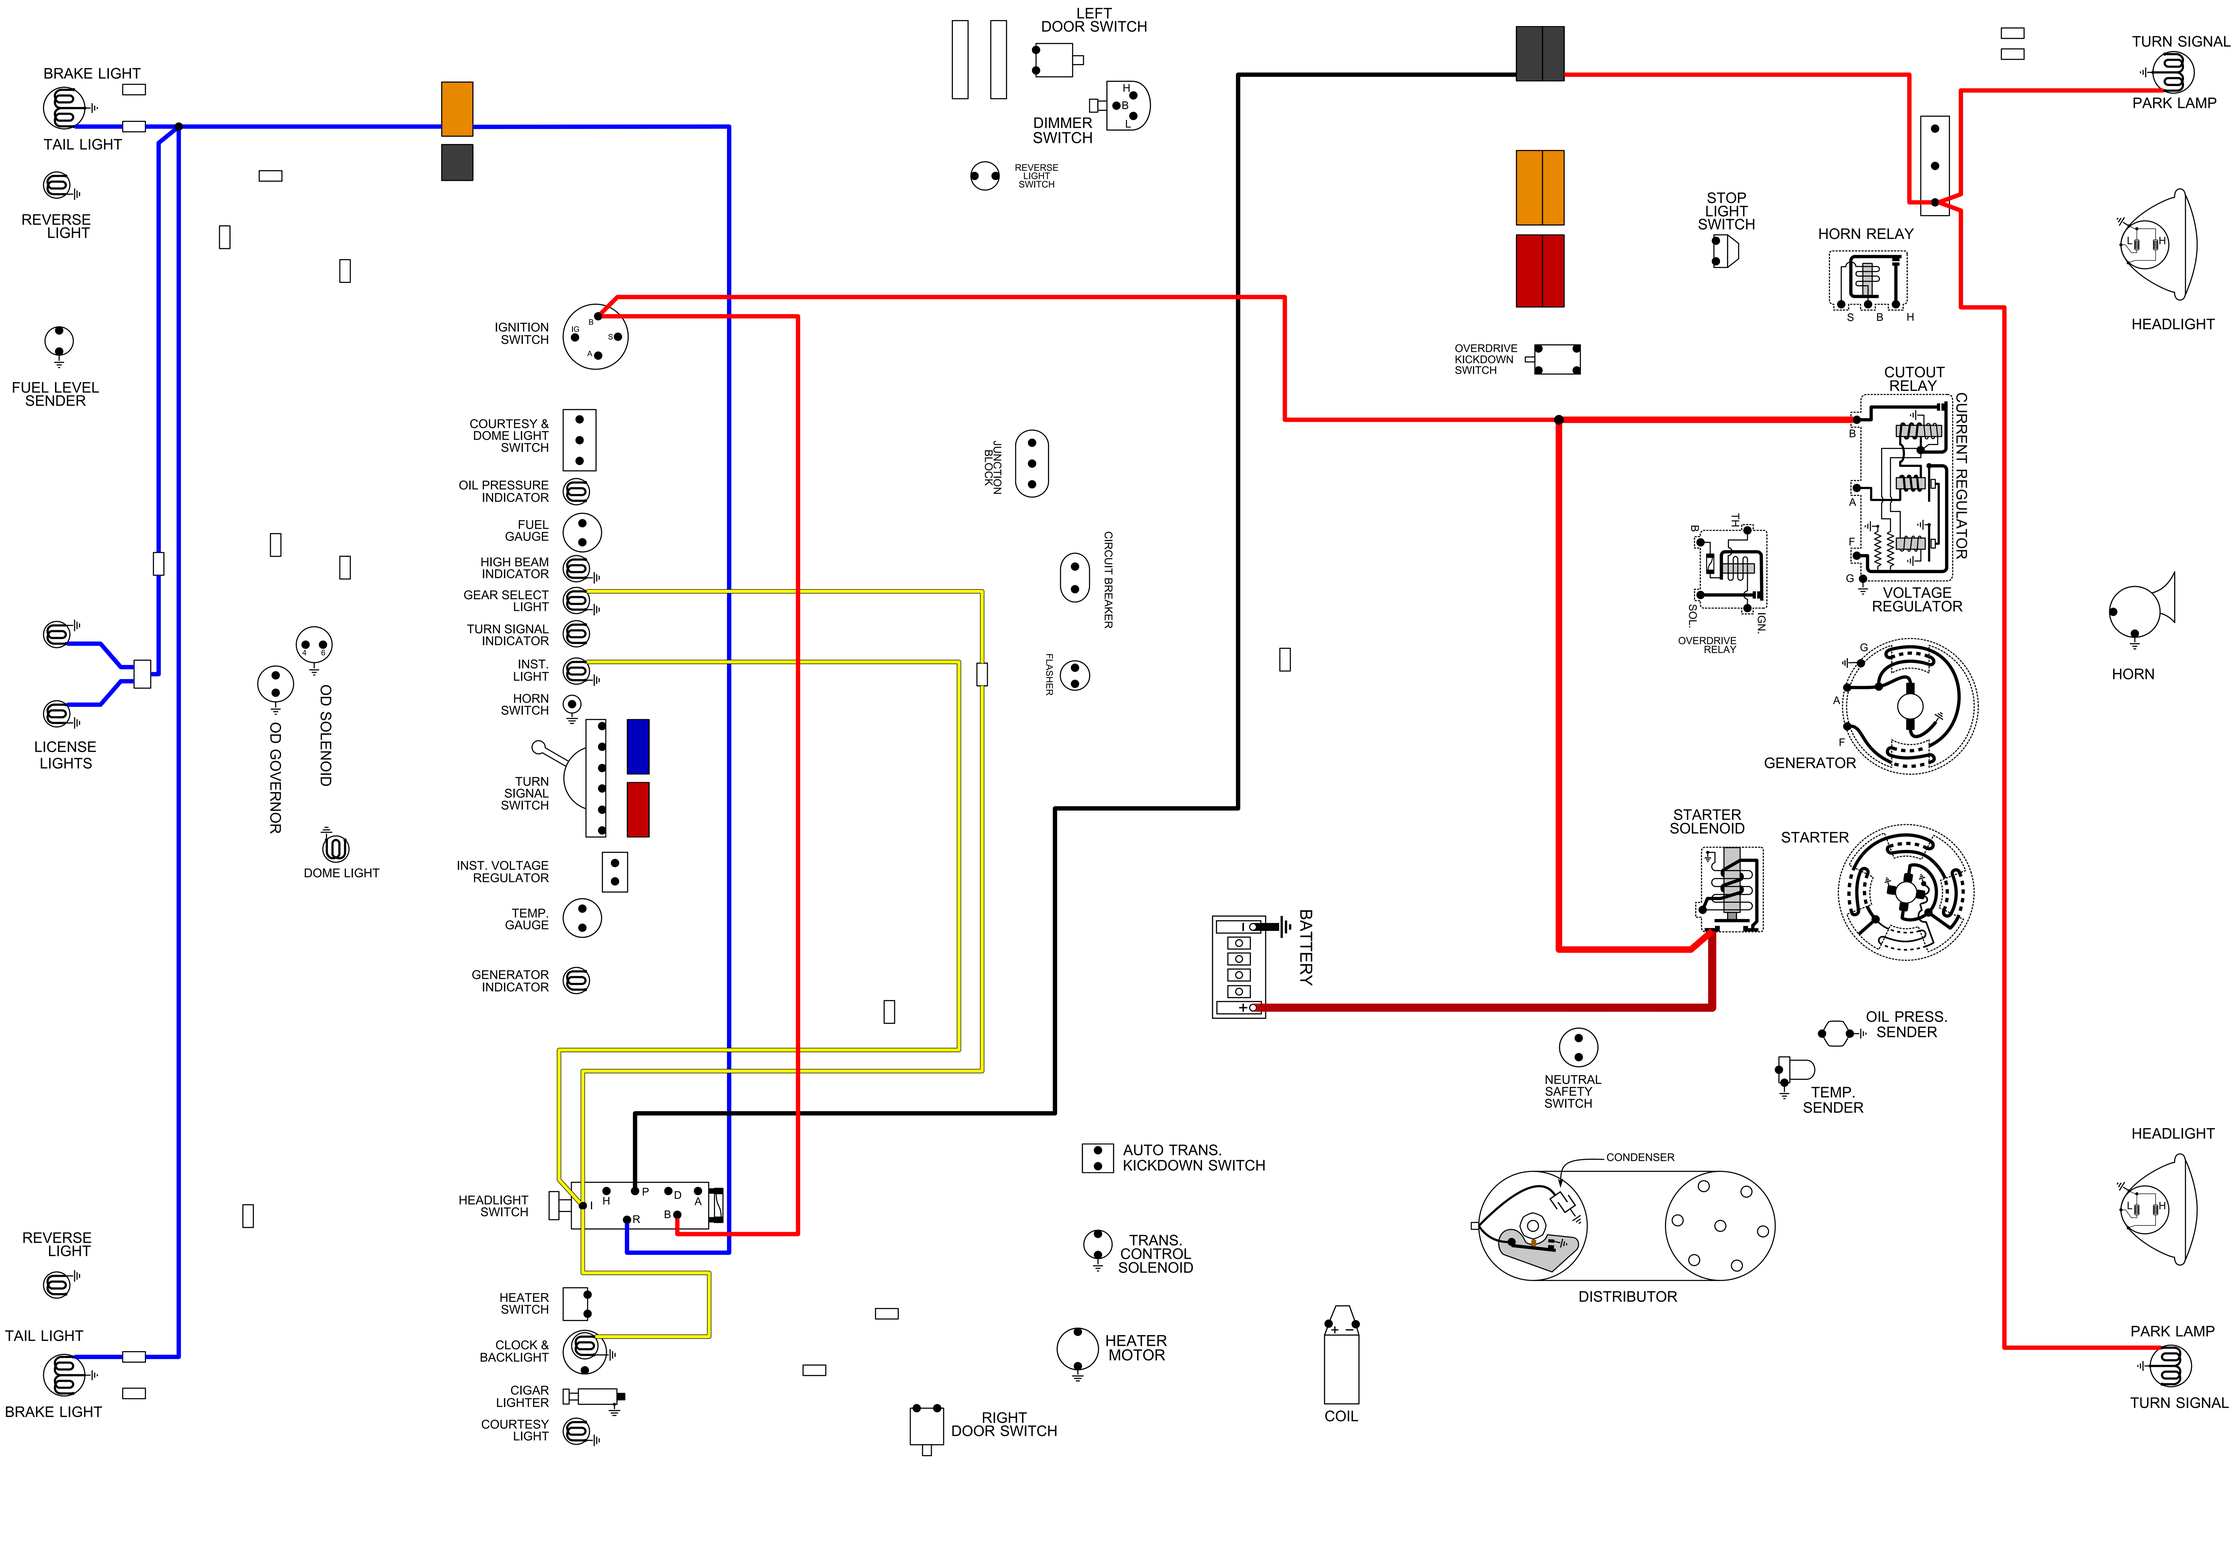


1958 RAMBLER AMERICAN I6

BRAKE LIGHTS

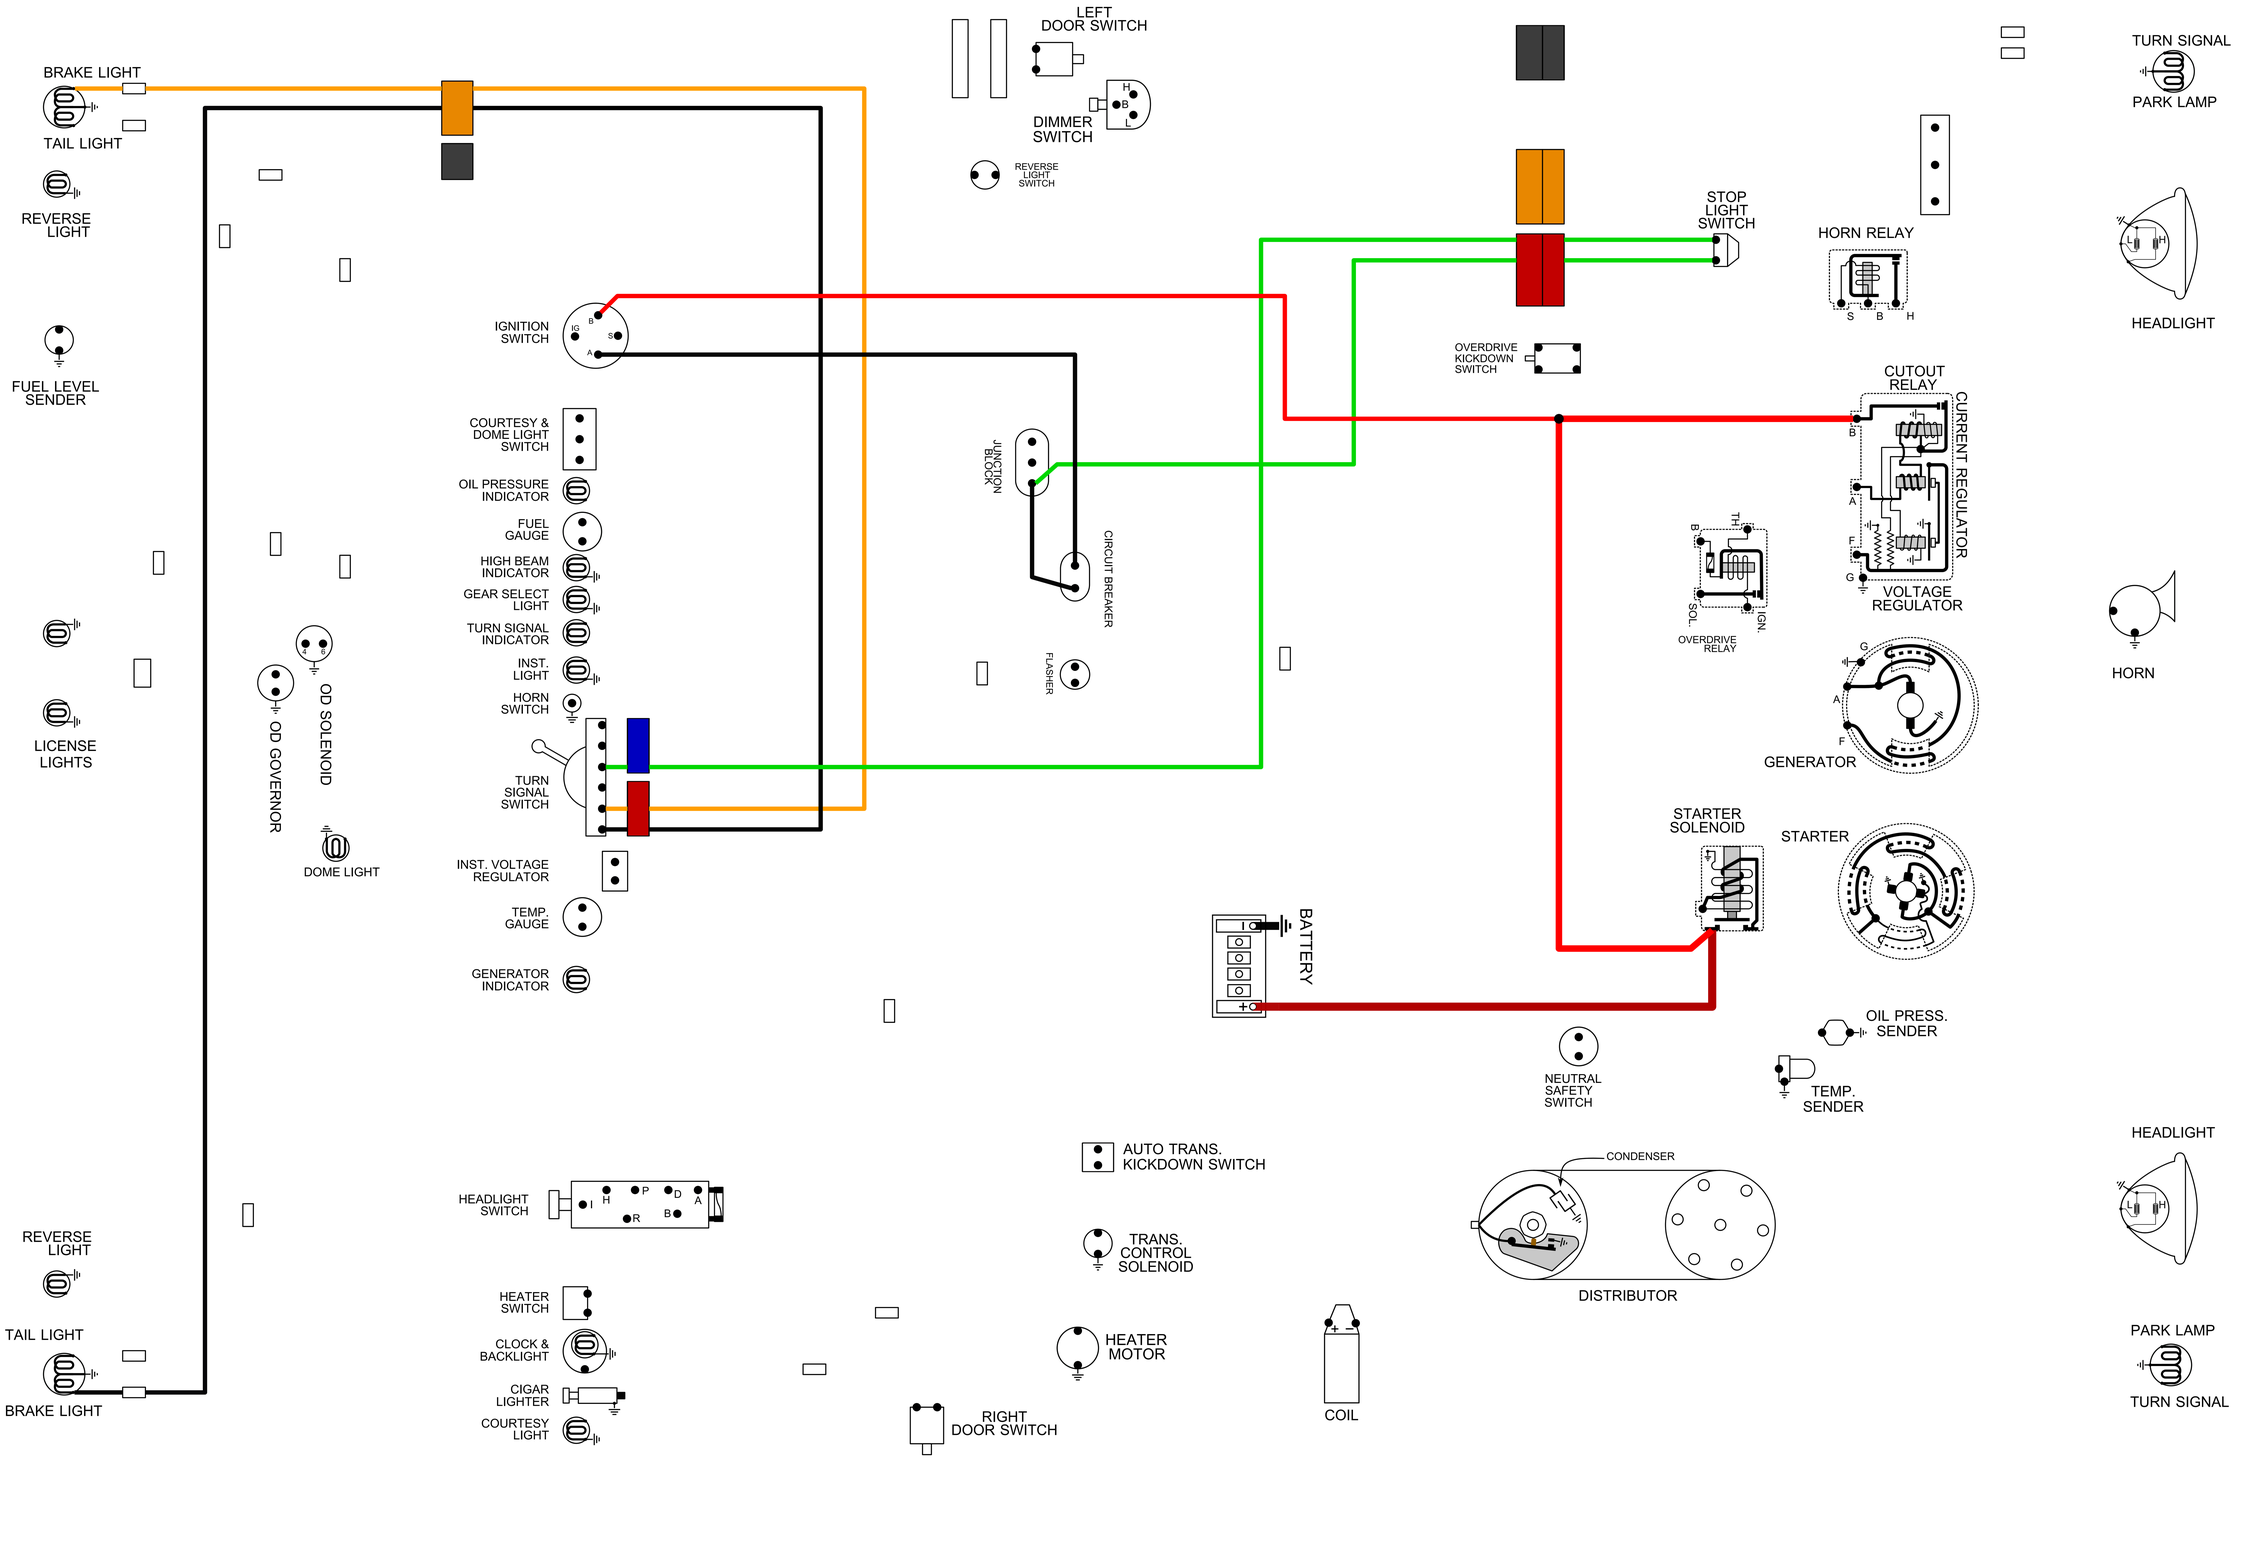


1958 RAMBLER AMERICAN I6

TURN SIGNALS

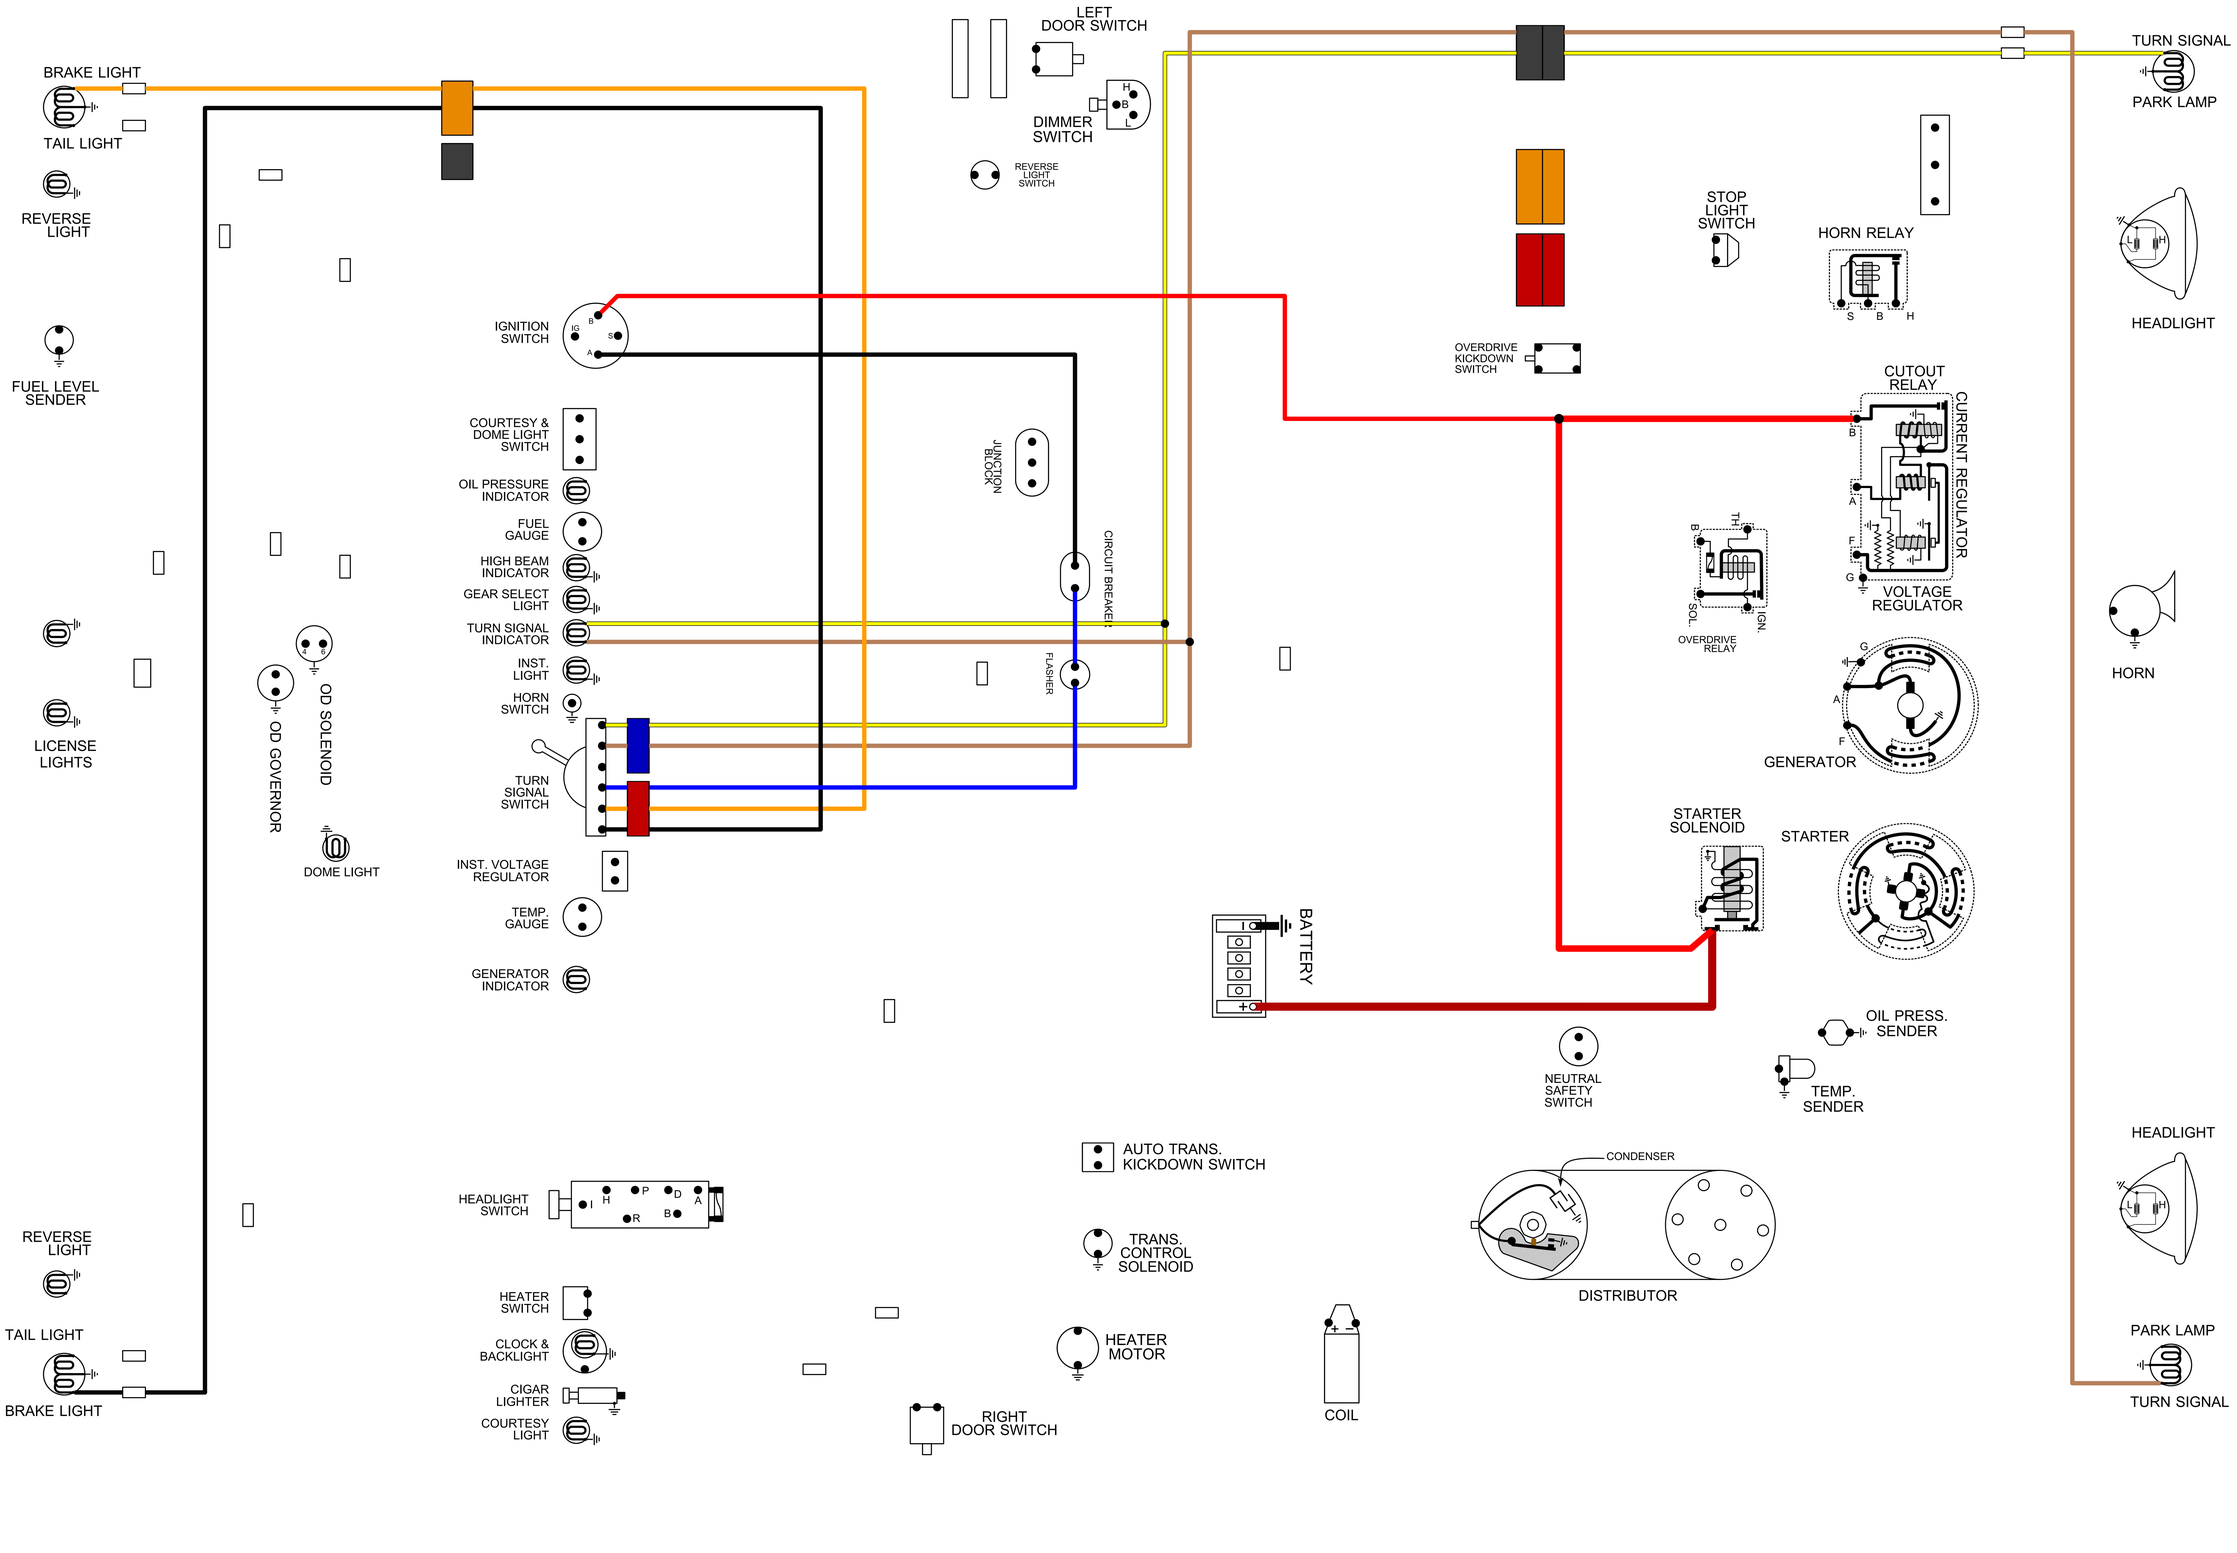


1958 RAMBLER AMERICAN I6
HEATER

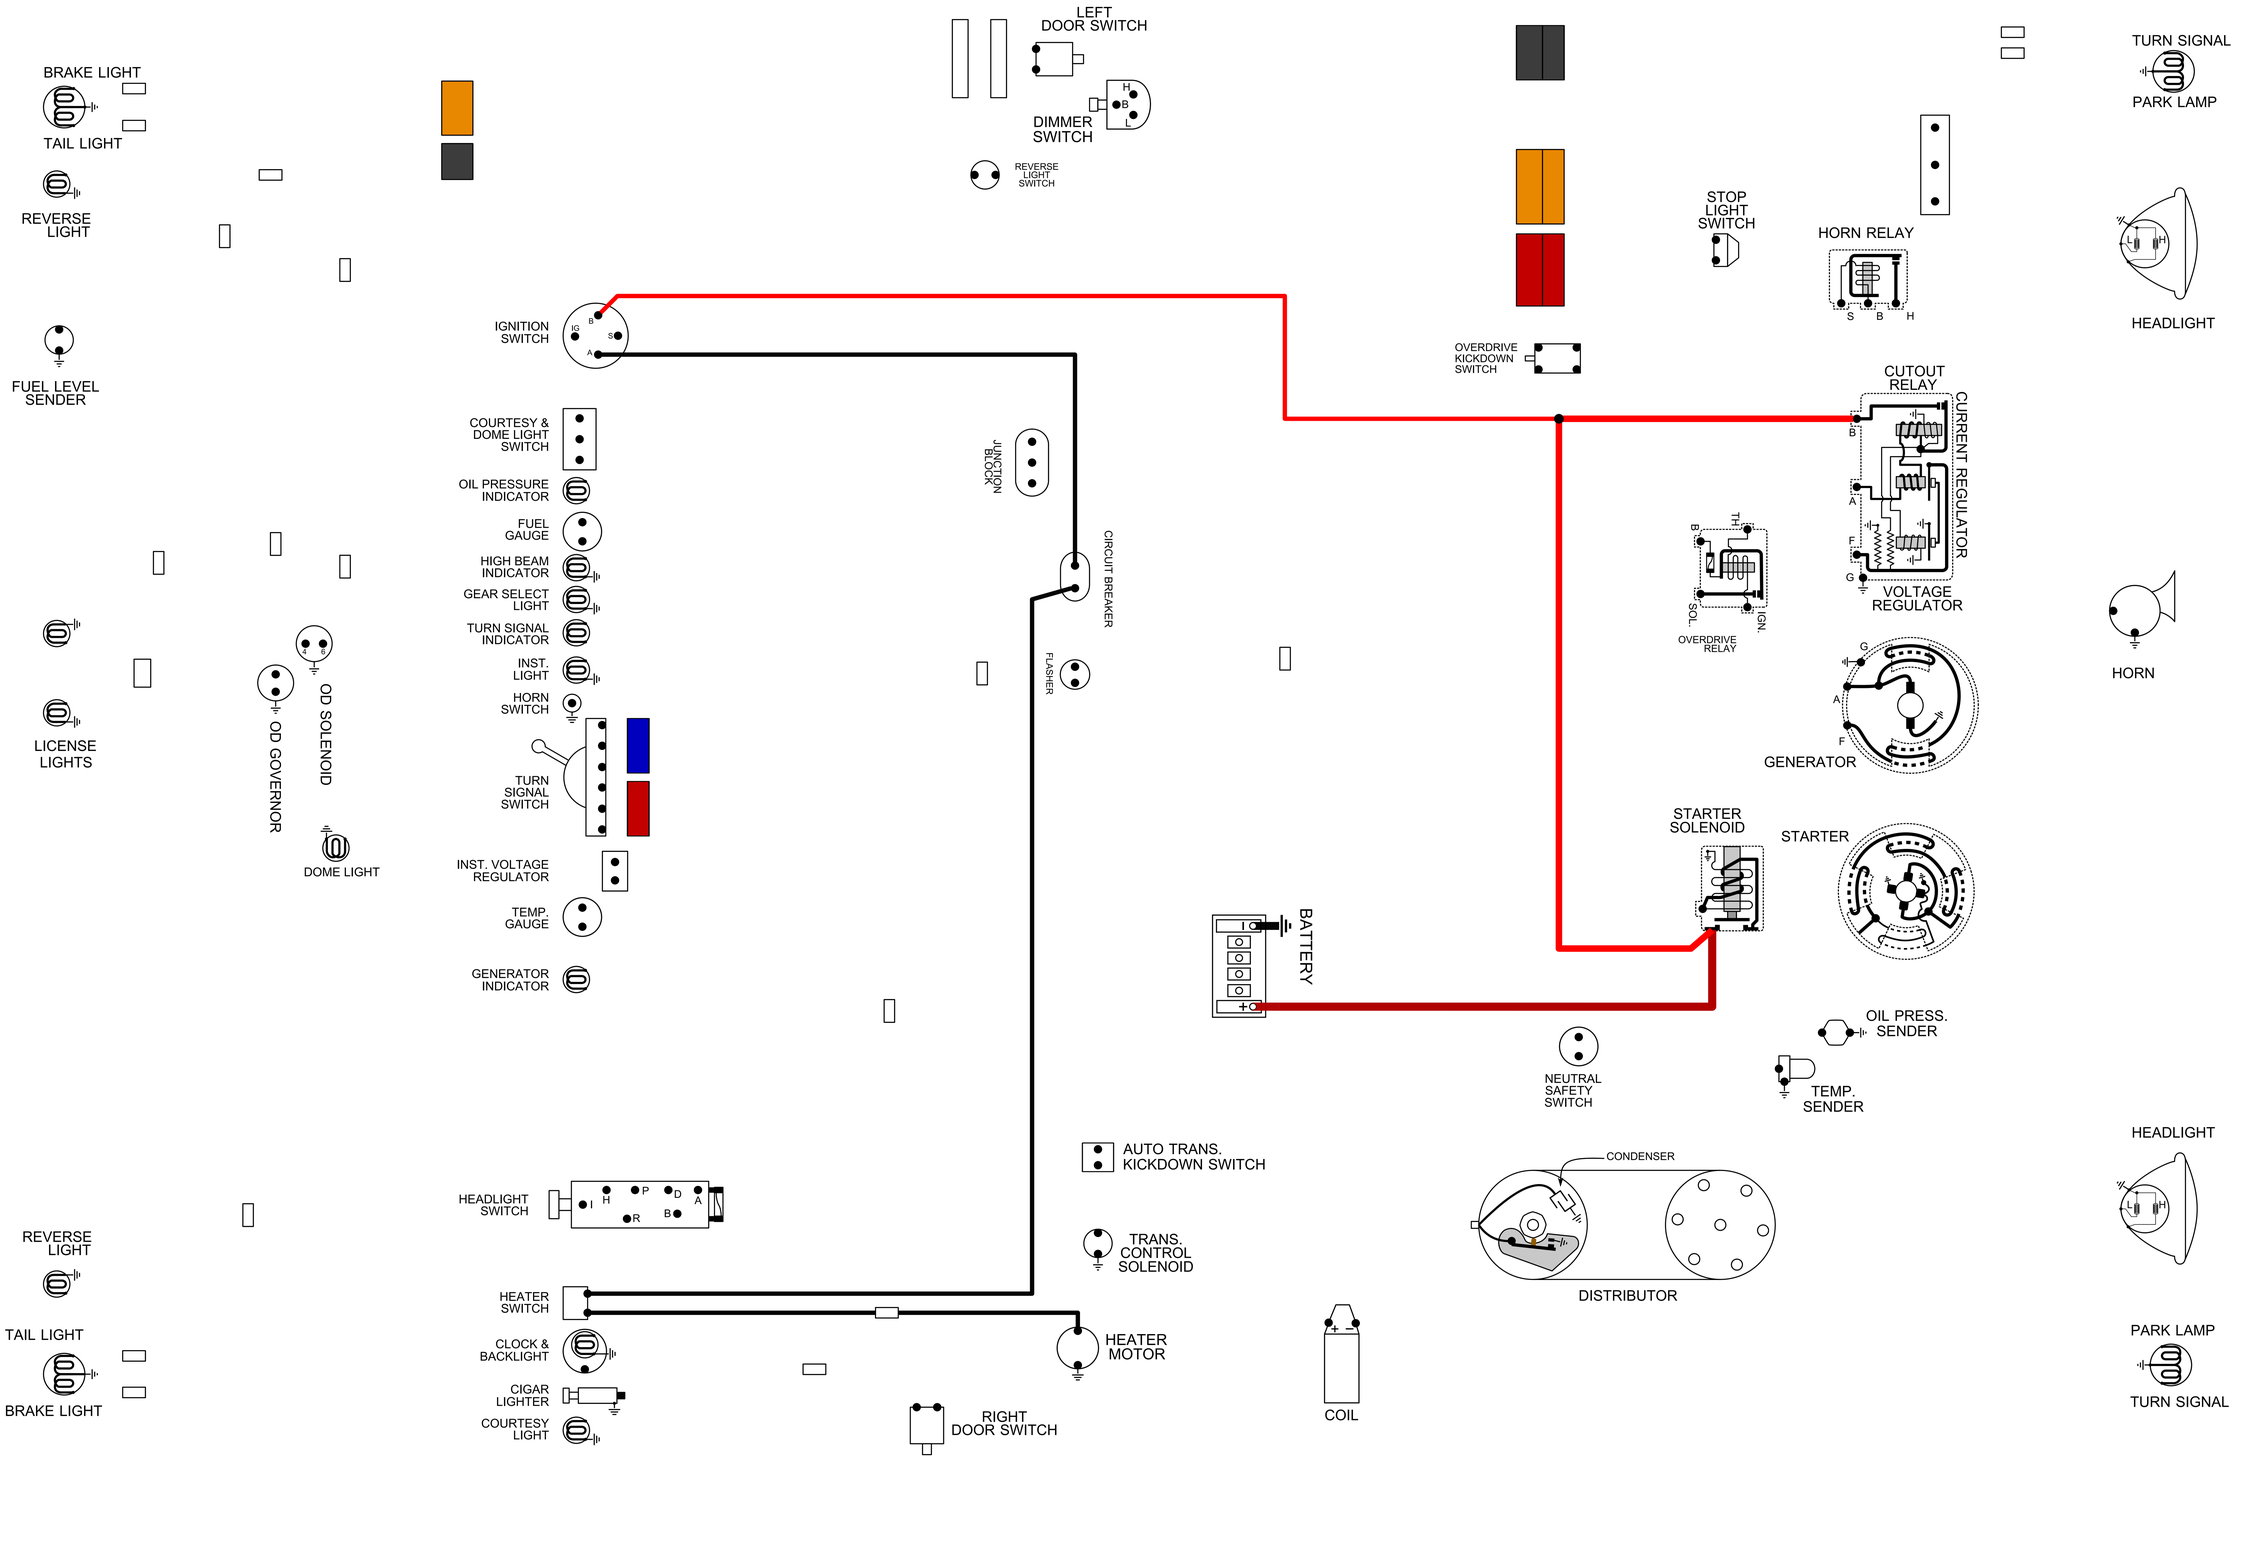


1958 RAMBLER AMERICAN I6

HORN

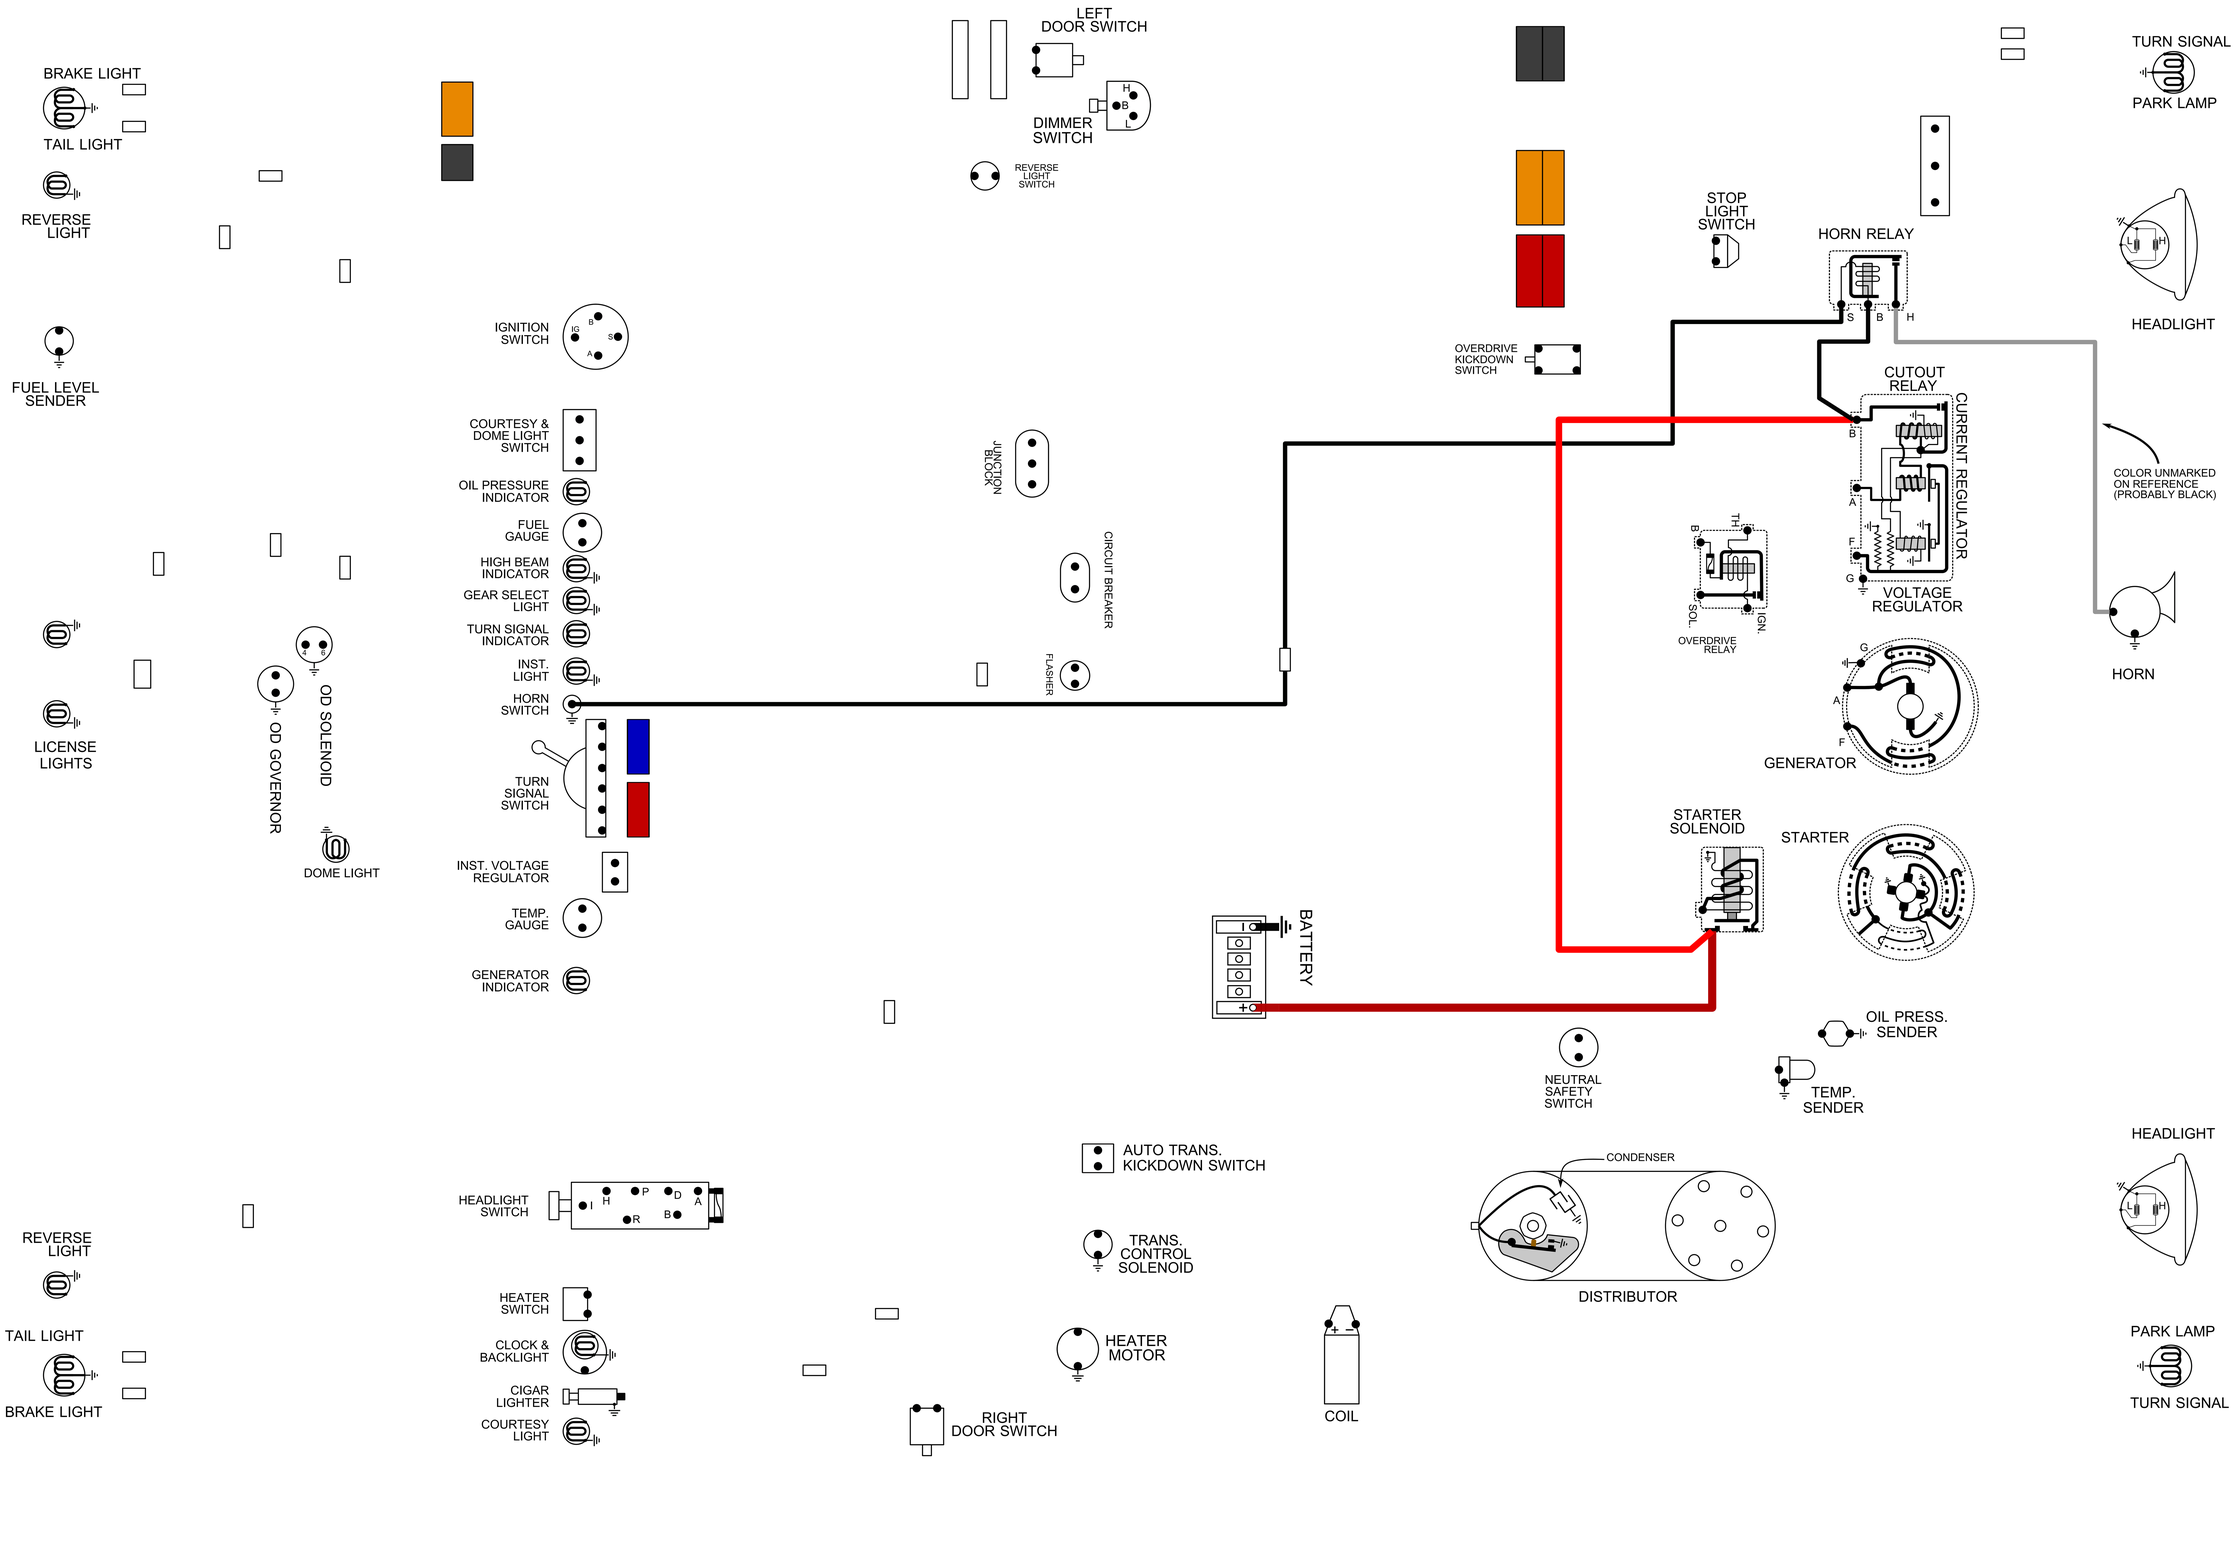


1958 RAMBLER AMERICAN I6
OVERDRIVE

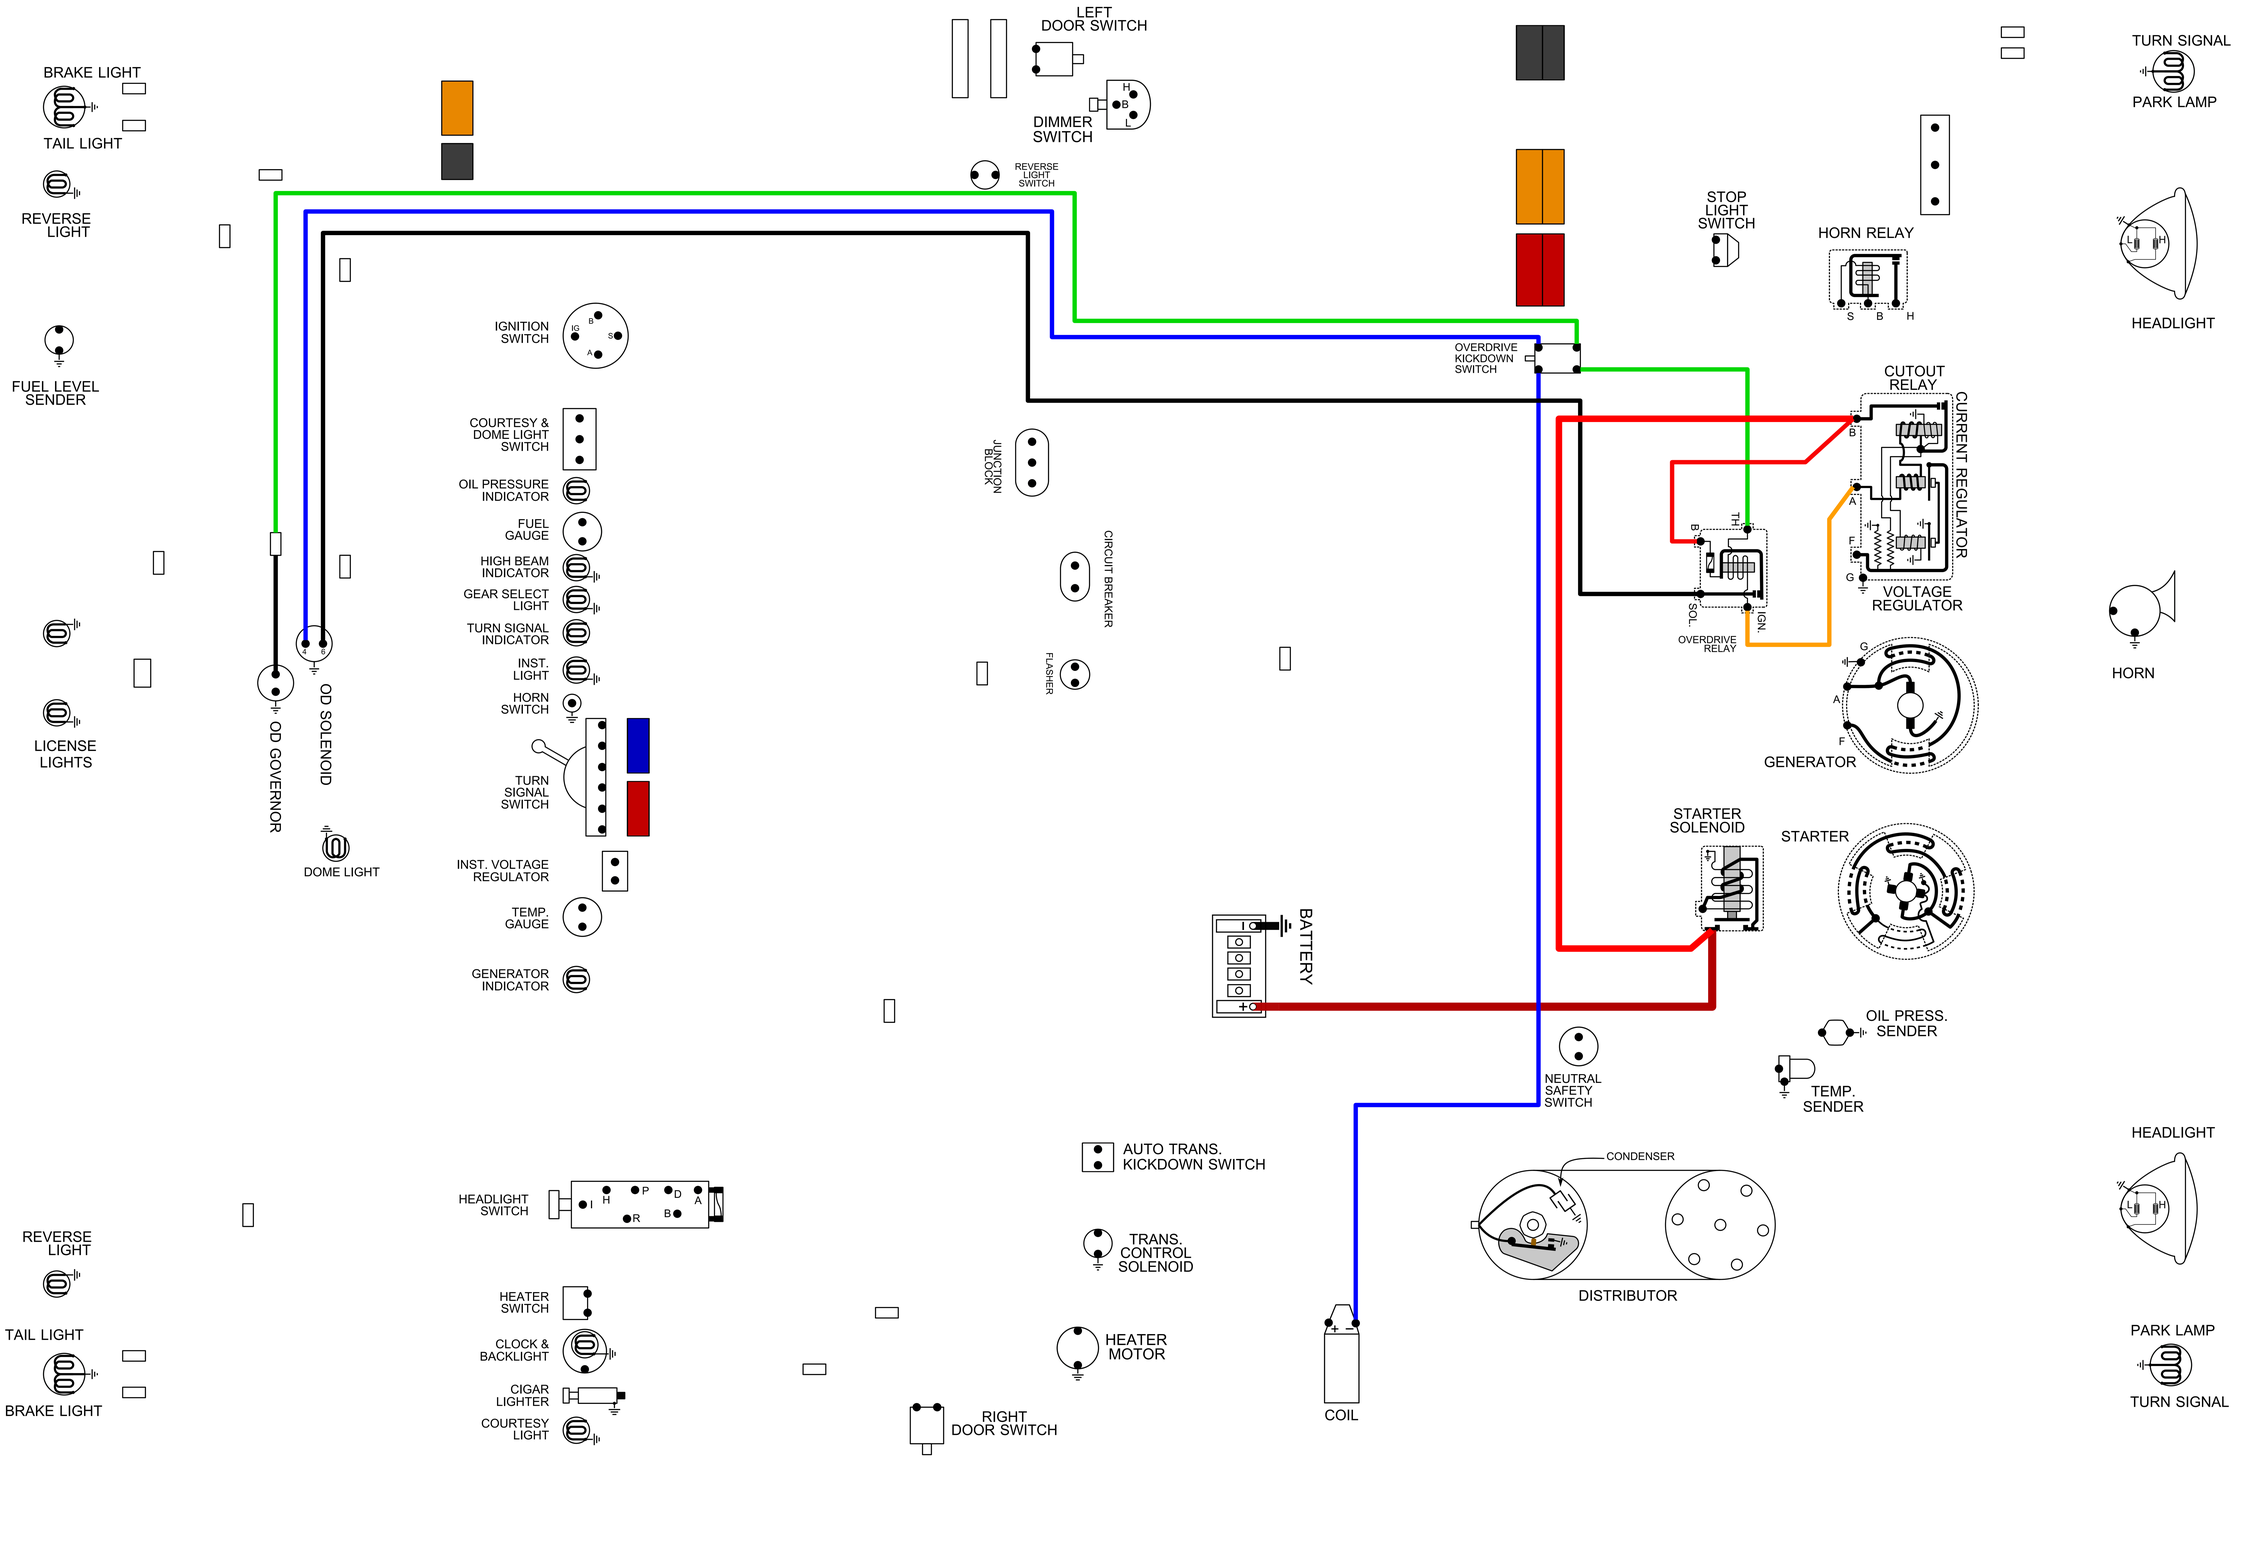

CINCO


1958 RAMBLER AMERICAN I6

GAUGES & WARNING LIGHTS

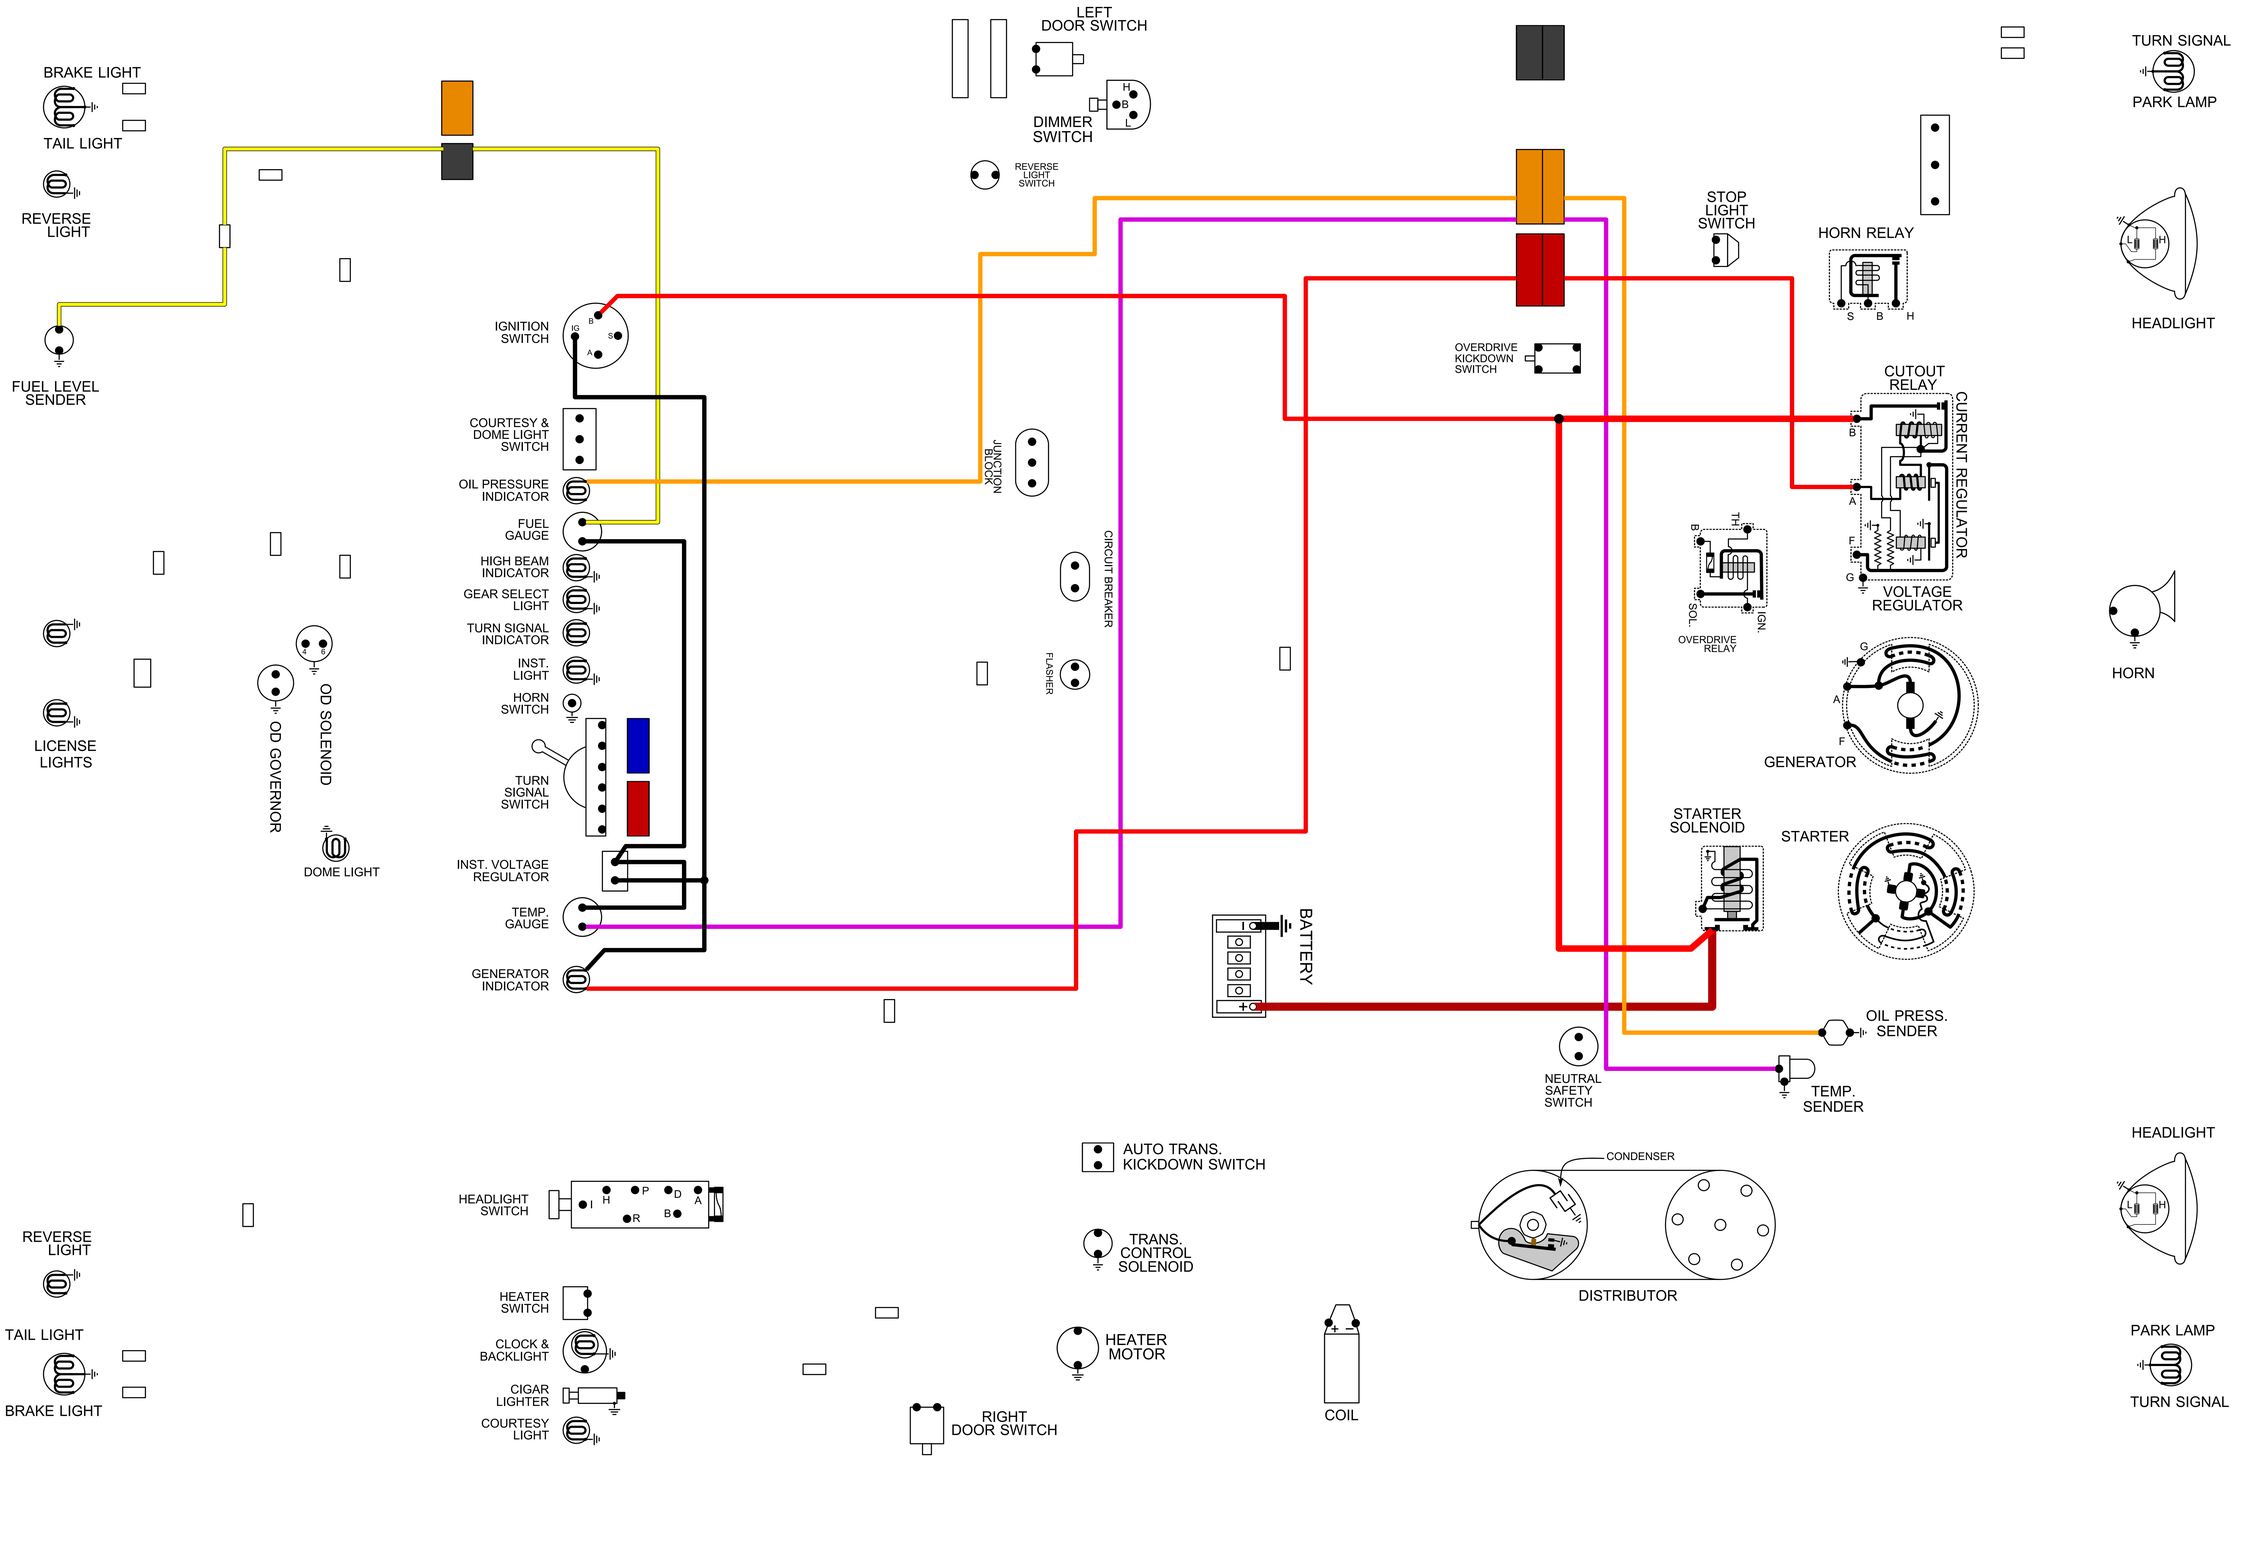


1958 RAMBLER AMERICAN I6

REVERSE LIGHTS

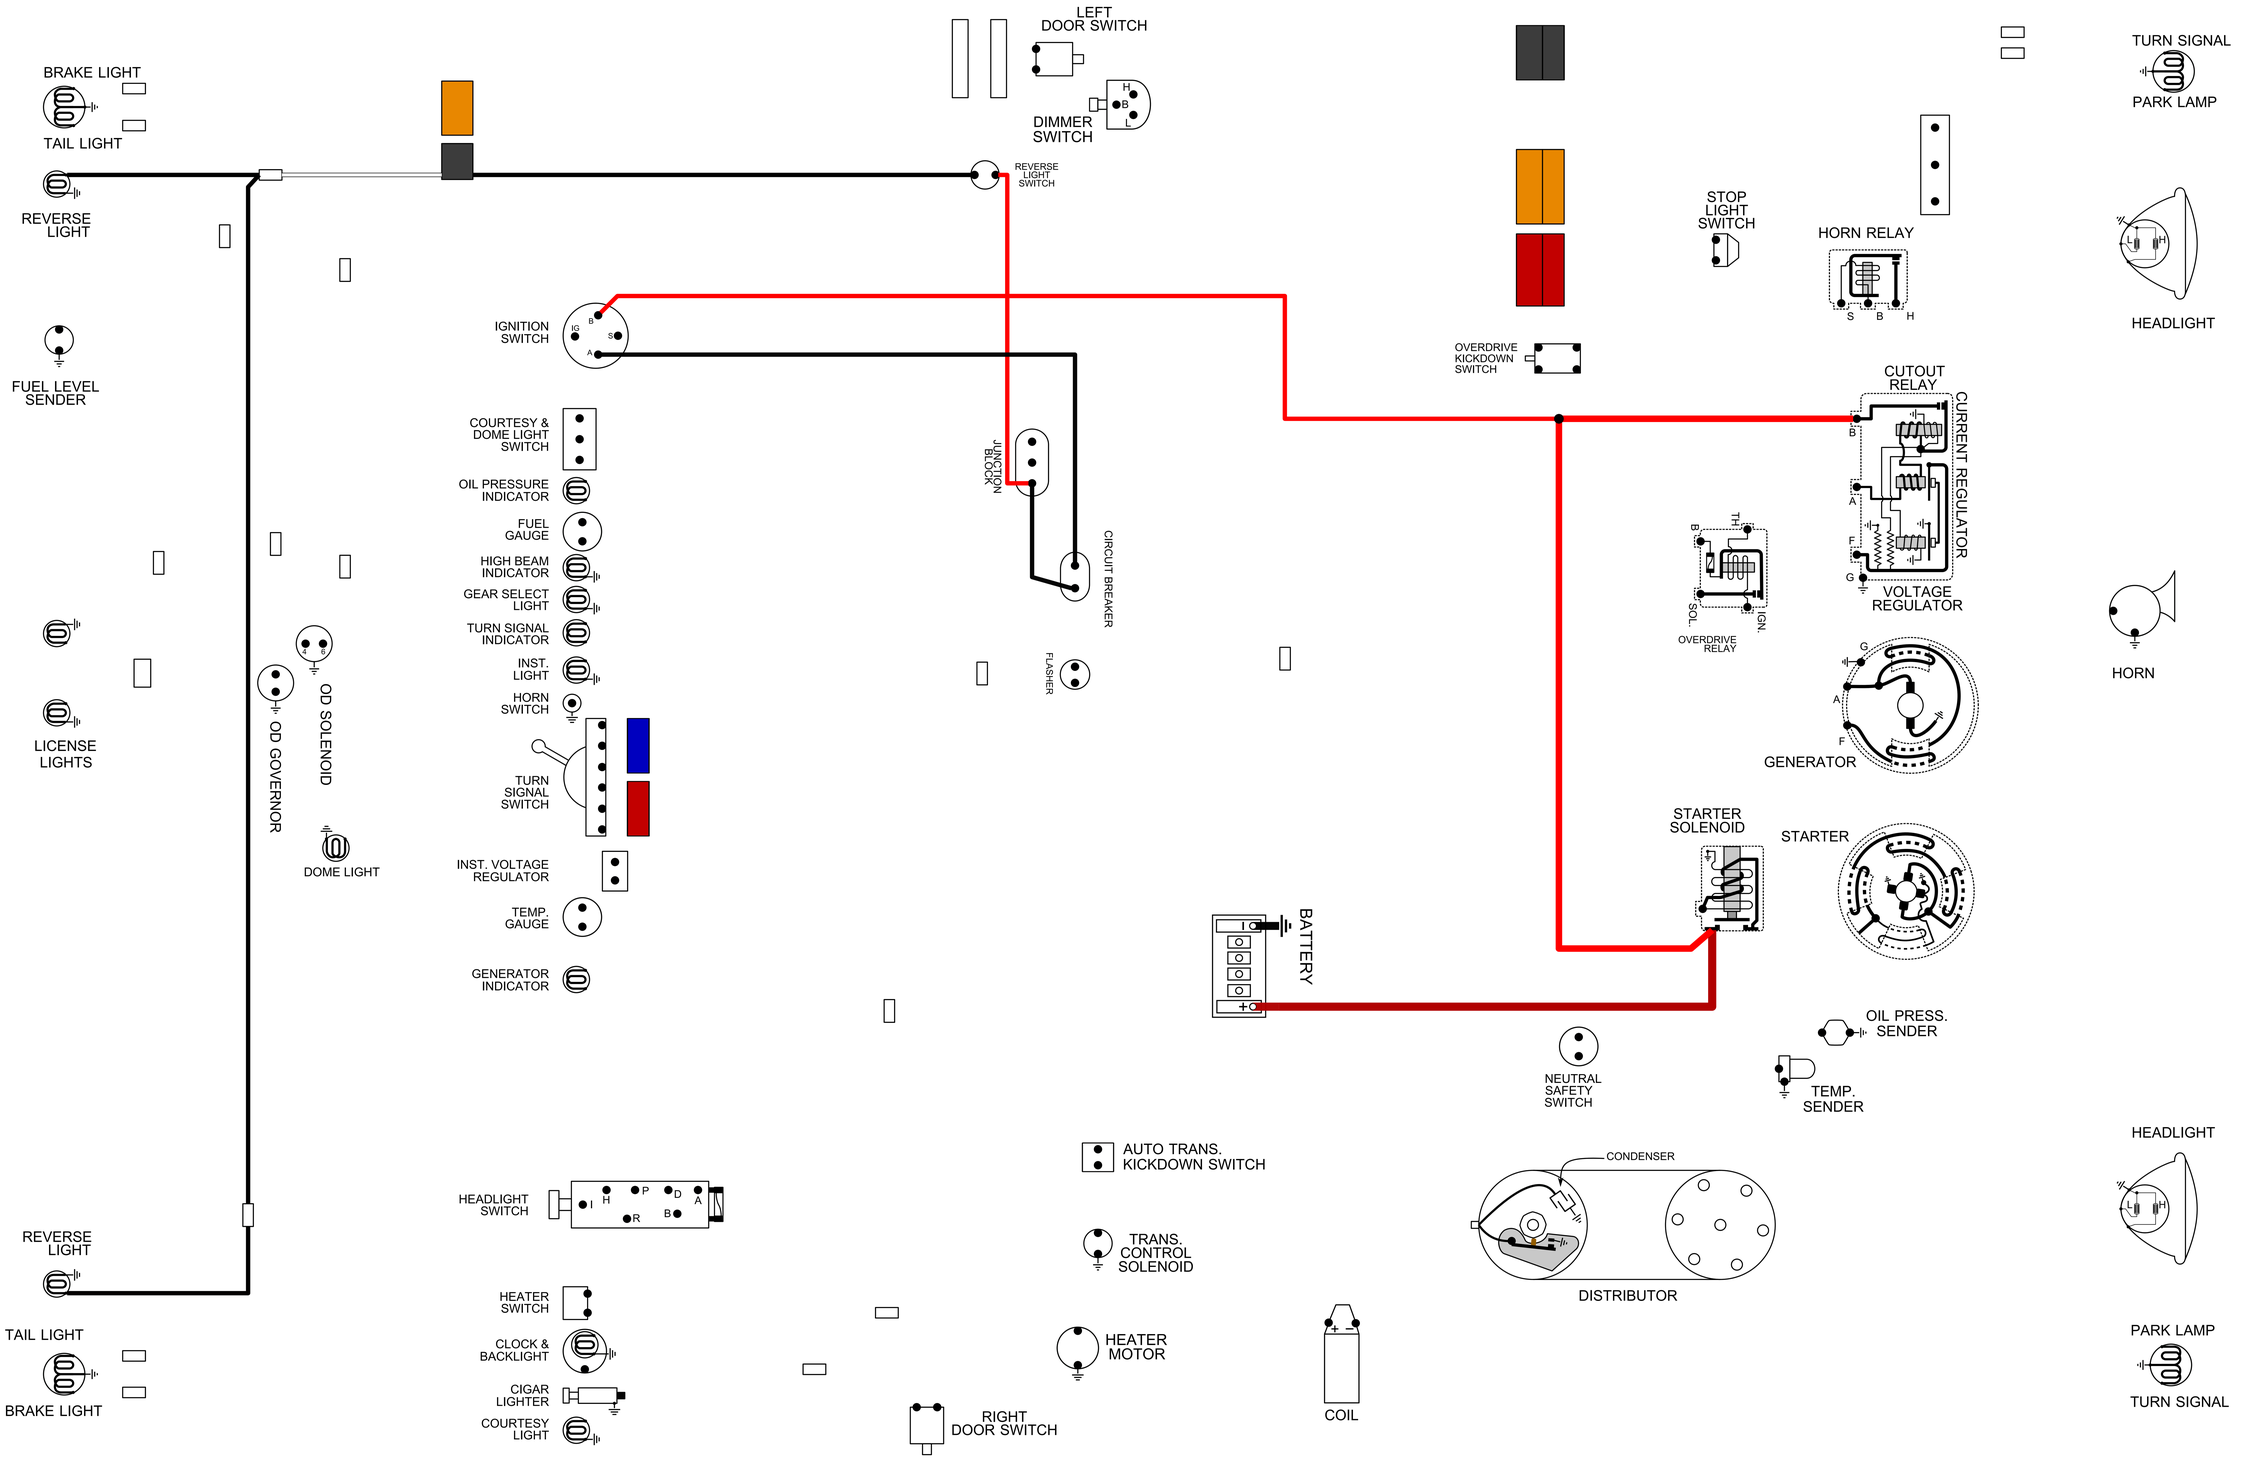

1958 RAMBLER AMERICAN I6

DOME LIGHT

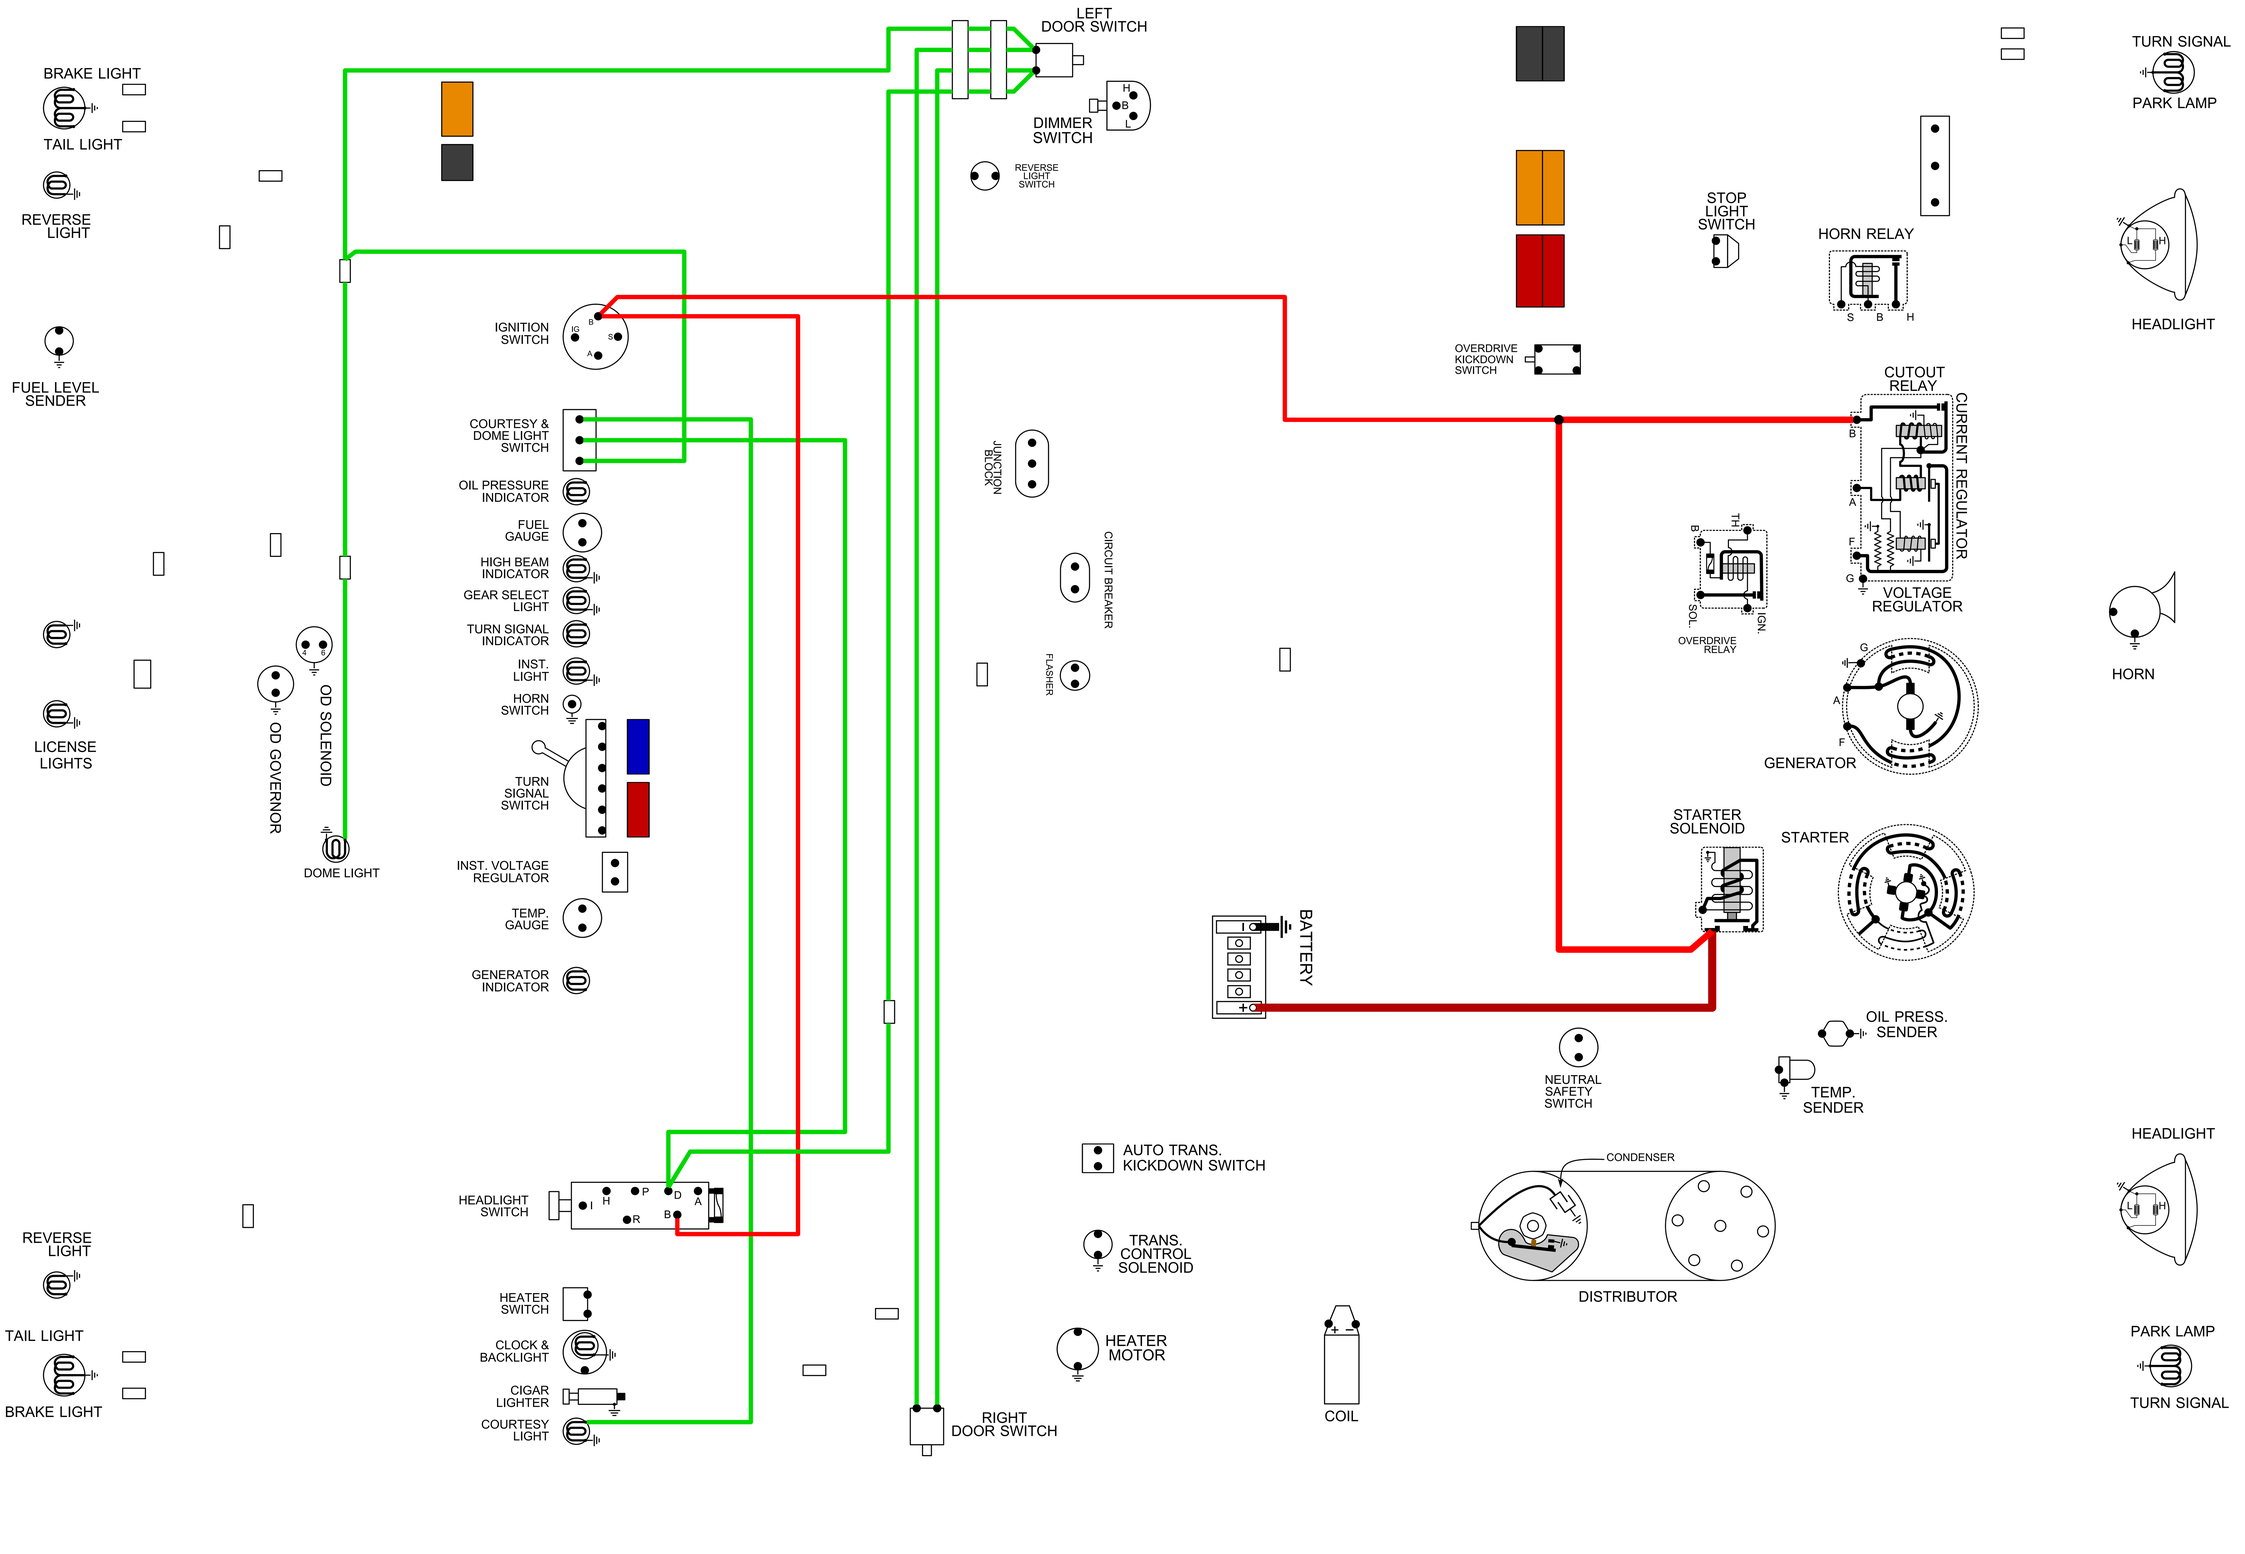

CINCO